


Manual for owners and skippers



Sailing yacht "BAVARIA 36 Cruiser"

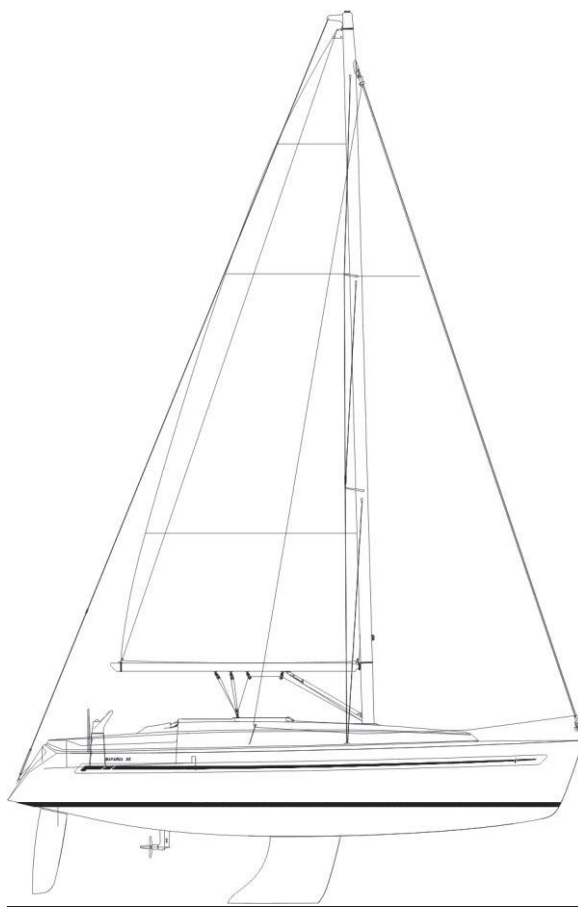

Bavaria Yachtbau GmbH • Bavariastr. 1 • D – 97232 Giebelstadt
Tel.: +49 (0) 9334 942 – 0; Fax: +49 (0)9334 942 – 116
E-Mail : info@bavaria-yachtbau.com

INDEX

	page
Introduction	4
Category of design	5
Builder's plate	6
Warnings	6
Declaration of Conformity	7
<u>1. Description of the yacht</u>	12
1.1 Main particulars	12
1.1.1 Principal dimensions	12
1.1.2 Displacement and weight	12
1.1.3 Motorization	12
1.1.4 Electrical installation	12
1.1.5 Tank capacities	12
1.1.6 Fixing point for cranes, resting-points for slipping and transport	12
1.2 General arrangement	13
1.2.1 Rigging plan	13
1.2.2 Deck arrangement	14
1.2.3 Accommodation plan	16
1.3 Drive system	18
1.3.1 Sails	18
1.3.2 Rigging	18
1.3.3 Motorizing, engine room, gear, propeller	18
<u>2. Installations and circuits</u>	21
2.1 Tanks and piping – water	21
2.1.1 Fresh water, drinking water – cold	21
2.1.2 Sea-water circulation	23
2.1.3 WC-installation, holding tank	23
2.2 Tanks and piping – fuel	24
2.3 Steering gear	25
2.3.1 Description of the system	25
2.3.2 Rudder blade and rudder bearing	25
2.4 Bilge pump, bilge lines	25
2.4.1 Description of the pumping arrangement	25
2.5 Electric installation	27
2.5.1 AC-installation	27
2.5.2 DC-installation	27
2.5.3 Operating the installation and specific features	27
2.5.4 Important warnings on the DC-installation	28
2.5.5 Important warnings on the AC-installation	28
2.5.6 Distribution of electric devices	29
2.5.7 Wiring plans	32
2.5.8 Distribution plans	33
2.5.9 AC-distribution	34
2.6 L.P.G. installation	36
2.6.1 The components	36
2.6.2 Operation	37
2.7 Fire protection	38
2.8 Anchor	39
2.9 Engine cooling system	39
2.10 Exhaust gas system	40
2.11 Ventilation/Airing	40
2.12 Board ducts, sea water valves	40

<u>3. Environmental protection</u>	43
3.1 Fuel and oil	43
3.2 Waste	43
3.3 Sound	43
3.4 Swell	43
3.5 Exhaust gas	43
3.6 Antifouling, coatings	43
3.7 Varnish remover	43
<u>4. Maintenance</u>	44
4.1 Maintenance, cleaning	44
4.2 Wearing- and spare parts	45
4.3 Repair work	45
4.4 Winter storage	45
<u>5. Final remarks and notes</u>	47
<u>6. List of manuals supplied</u>	48

Introduction

This manual will help you to handle your yacht safely and with pleasure. Apart from information about the yacht itself and installed or additionally supplied fittings the manual also contains information on operation and maintenance. Please familiarise yourself with everything before you go on your first voyage.

If this is your first yacht or if you are not really familiar with the special characteristics of a motor yacht please make sure you get proper training before you put it into operation. Do not hesitate to contact the dealer or our shipyard for information about further training possibilities.

As the scope of supply depends on the order, the equipment of your yacht can deviate with some descriptions and illustrations. In order to be able to adapt our yachts to the constantly progressing technical standard, we must reserve ourselves changes in form, equipment and technology. For these reasons no requirements can be derived from all data, illustrations and descriptions in this manual.

**PLEASE KEEP THIS MANUAL IN A SAFE PLACE
AND HAND IT OVER TO THE NEW OWNER IF YOU SELL THE YACHT.**

BAVARIA would like to welcome you to the circle of **BAVARIA** owners and would like to thank you for placing your confidence in our products by acquiring this yacht.

Your contract partner and the management and staff of Bavaria Yachtbau GmbH hope you will enjoy your new yacht.

Bon voyage, fair winds and fine weather.

BAVARIA Yachtbau GmbH
Management



W. Herrmann

Following the European Recreational Craft Directive each boat has to be classified according to a category of design.

All sailing yachts of BAVARIA belong to the category of design A,

designed for extended voyages where conditions may exceed wind force 8 (Beaufort scale) and significant wave heights of 4m and above, and vessels largely self-sufficient.

Certification

Actually the EC Directive intends for yachts of this size the certification module Aa only. That means that the manufacturer certifies the correspondence of construction and equipment with the Directive itself but stability and buoyancy is checked by another notified body.

IMCI (International Marine Certification Institute) was put into charge as a notified body (see: Declaration of Conformity).


Identification

The hull identification was formed into the transom on starboard side. This is a unique sequence of digits and letters. It is

DE-BAVV36V5D505

Builder's plate

The builder's plate on the front wall of the cockpit is a demand of the Directive because certain information are required which will be explained in the following.

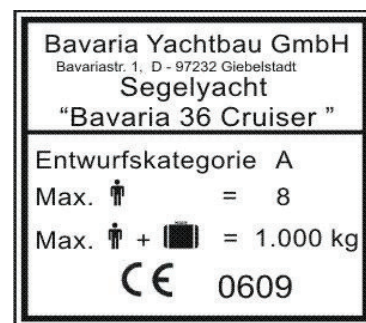

Explanations

- **Category of design A:** Ocean
- **Max. = 8:** Maximum number of persons recommended by the manufacturer if the yacht is situated in the sea area corresponding to the category of design. The number of crew can be increased under consideration of the maximum additional loading capacity if the yacht is on a voyage in non-ocean areas.
- **Max. + = 1000 kg:** Maximum additional loading including 8 persons, stores, provisions and personal equipment (excluding tank capacities).
- **CE 0609:** CE marking which indicates the conformity of the yacht with all provisions of the Directive. The sequence of digits is the code number of the certifying body, in this case the **IMCI (International Marine Certification Institute)** - (see: Declaration of Conformity).

Warnings

Many chapters of this manual will support a troublefree operation, maintenance or draw your attention to signs of dangers. To find them more easily they are especially marked (in boxes or in bold). We advise you to study them carefully although the experienced skipper might be quite familiar with many of them.

The following chapters contain such warnings/notes or other important information for operating the yacht.



Danger
means that an extreme real hazard which will lead to the death or too irreparable injuries with great probability exists if no adequate precautions are found.



Warning
means that a hazard which can lead to injuries or death exists if no adequate precautions are found.



Caution
means, that a memory of safety measures or the attention judges on handling, that can be unsure or lead to personal injuries or to harm of the vessel or from components.

INTERNATIONAL MARINE CERTIFICATION INSTITUTE

International Non-Profit Association
Rue Abbe Cuyppers 3
B-1040 Bruxelles
Belgium
+32-2-741 0636
+32-2-741 2418

**EXAMINATION REPORT**

We hereby certify that the following boat type

Bavaria Yachtbau GmbH

Bavariaste. 1 - D-97232 GIEBELSTADT - GERMANY

BAVARIA 36 CRUISER DEEP KEEL

Boat Type	Sail
Boat design category	A
Module type	Aa
Examination type	No
Length of hull [m]	10,96
Beam of hull [m]	3,60
Loaded displacement mass [kg]	6.433
Maximum rated engine power [kW]	21
Number of persons recommended	8
Recommended load [kg]	1000
Certificate number	BBAV007

*meets the Essential Safety Requirements 3.2 for Stability and
Freeboard and 3.3 for Buoyancy and Floation of the Directive
94/25/EC for Recreational Craft*

U. Heinemann

Ulrich Heinemann (Managing Director)

for EU - Notified Body : 0609

2004-10-07



This certificate is valid for boats identified by the HIN as a
2005 model

References to the relevant standards used are given on the Declaration of Conformity

INTERNATIONAL MARINE CERTIFICATION INSTITUTE

International Non-Profit Association
Rue Abbé Cuyper 5
B-1040 Bruxelles
Belgium
+32-2-741 8836
+32-2-741 2418

**EXAMINATION REPORT**

We hereby certify that the following boat type

Bavaria Yachtbau GmbH

Bavariastr. 1 - D-97252 GIEBELSTADT - GERMANY

BAVARIA 36 CRUISER AC

Boat Type	Sail
Boat design category	A
Module type	Aa
Examination type	No
Length of hull [m]	10,96
Beam of hull [m]	3,60
Loaded displacement mass [kg]	6.533
Maximum rated engine power [kW]	21
Number of persons recommended	8
Recommended load [kg]	1000
Certificate number	BBAV004

*meets the Essential Safety Requirements 3.2 for Stability and
Freeboard and 3.3 for Buoyancy and Floation of the Directive
94/25/EC for Recreational C*

U. Heinemann
Ulrich Heinemann (Managing Director)
for EU - Notified Body : 0609
2004-10-07



This certificate is valid for boats identified by the HIN as a
2005 model

References to the relevant standards used are given on the Declaration of Conformity

1. Description of the yacht

1.1 Main particulars

1.1.1 Principal dimensions

Length overall	L_{OA}	11,40m	Length of hull	L_H	10,96 m
Length on waterline	L_W	9,39 m	Breadth max.	B_{max}	3,60 m
Draught - normal keel	D_{max}	abt 1,60 m	Draught - flat keel	D_{max}	abt 1,91 m
Headroom (without antenna and similar things)			H_D	abt	15,16 m
Headroom (for transport)			H_T	abt	3,66 m

1.1.2 Displacement and weights

Weight of the empty yacht -incl. safety equipment	5000 kg
Weight of the fully equipped yacht- ready for sailing with crew	6530 kg
Ballast normal keel	1600 kg
Ballast deep keel	1560 kg

1.1.3 Motorization

Diesel engine:

Manufacturer Volvo Type MD 2020 Output 14 kW or MD 2030, 21 kw

Cooling indirect (sea-/fresh-water)

Reverse-reduction gear Saildrive MS25S reduction ratio 2,19:1

propeller 2-bladed fixed propeller (option folded propeller)

1.1.4 Electrical installation

220/110 V (option) AC-installation

shore connection (option) socket CEE-plug current operated 230 V earthed socket
 battery charger (option) 230 V AC / 12 V DC with 27 A max. current (option)

12 V DC-system

1 x engine battery 12 V 55 Ah 1 x bord battery (option 2 x) 12 V 140 Ah

motor generator (alternator) battery charger (option)

The distribution occurs about switchboard, electric circuits with thermal safety switches, LED display, rocker switches and voltmeters with changeover switch.


1.1.5. Tank capacities

1 fresh water tank	abt 150 l	on port side below the aftcabin berth.
1 fuel tank	abt 150 l	on starboard side below the aftcabin berth.
1 fresh water tank	abt 150 l	into the bow.
1 holding tank (option)	abt 80 l	in the locker in bath on starboard side.
1 gas cylinder	abt 3 kg cylinder (Butane)	

1.1.6. Fixing points for cranes, resting-points for slipping and transport




Attention ! The rear webbing will be placed in the area of the sail drive.

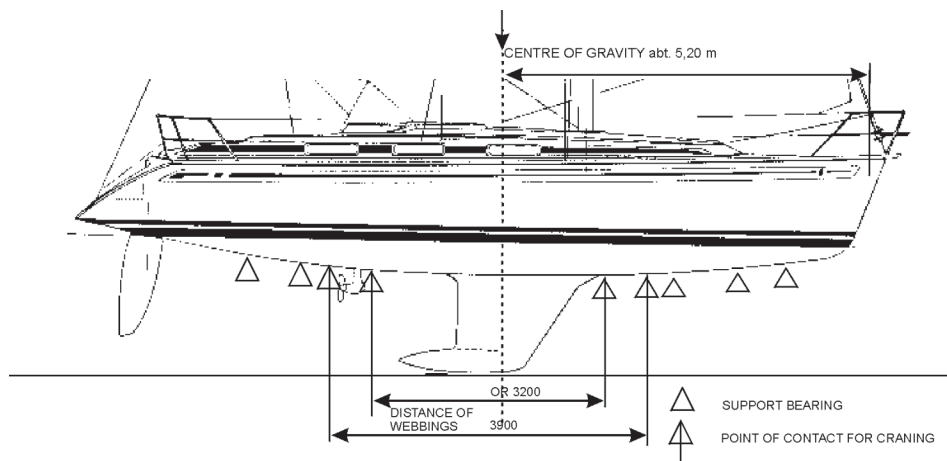


1.2 General arrangement

1.2.1 Rigging plan

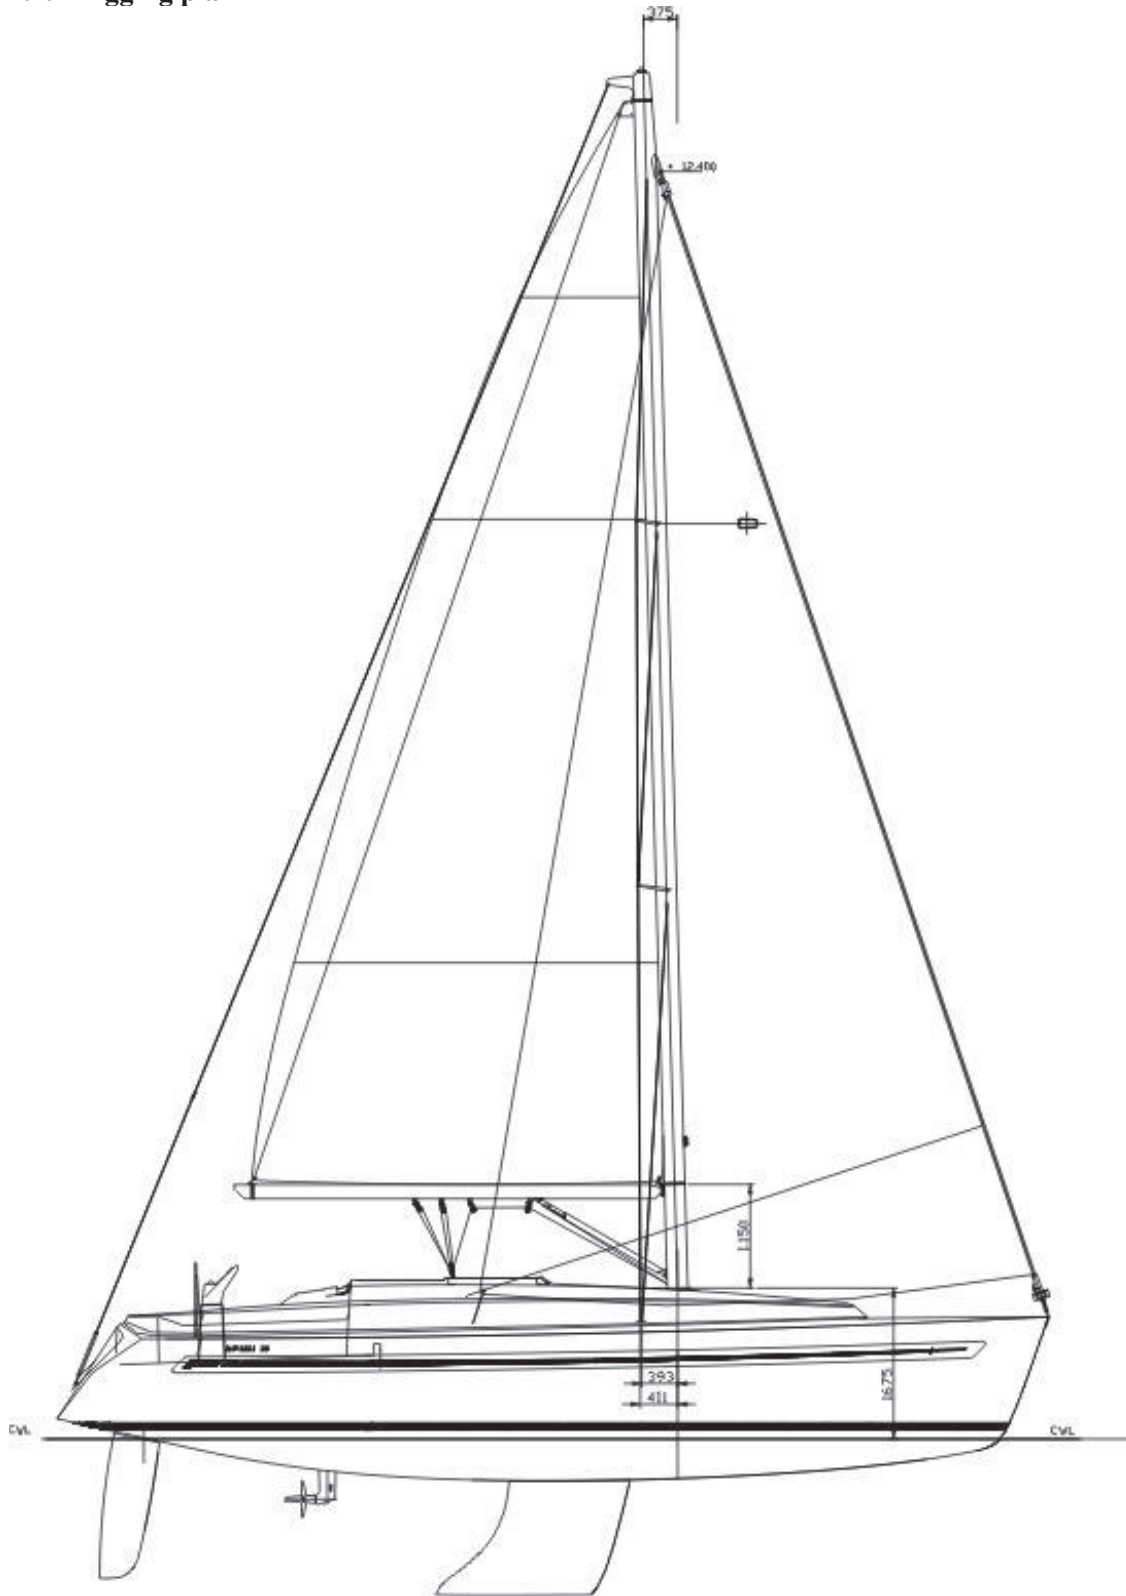
**Reference**

The valid measuring of the foresail reefing gear are on the enclosure note at the carton of the Furlex-foresail reefing gear.


1.2.2 Deck arrangement

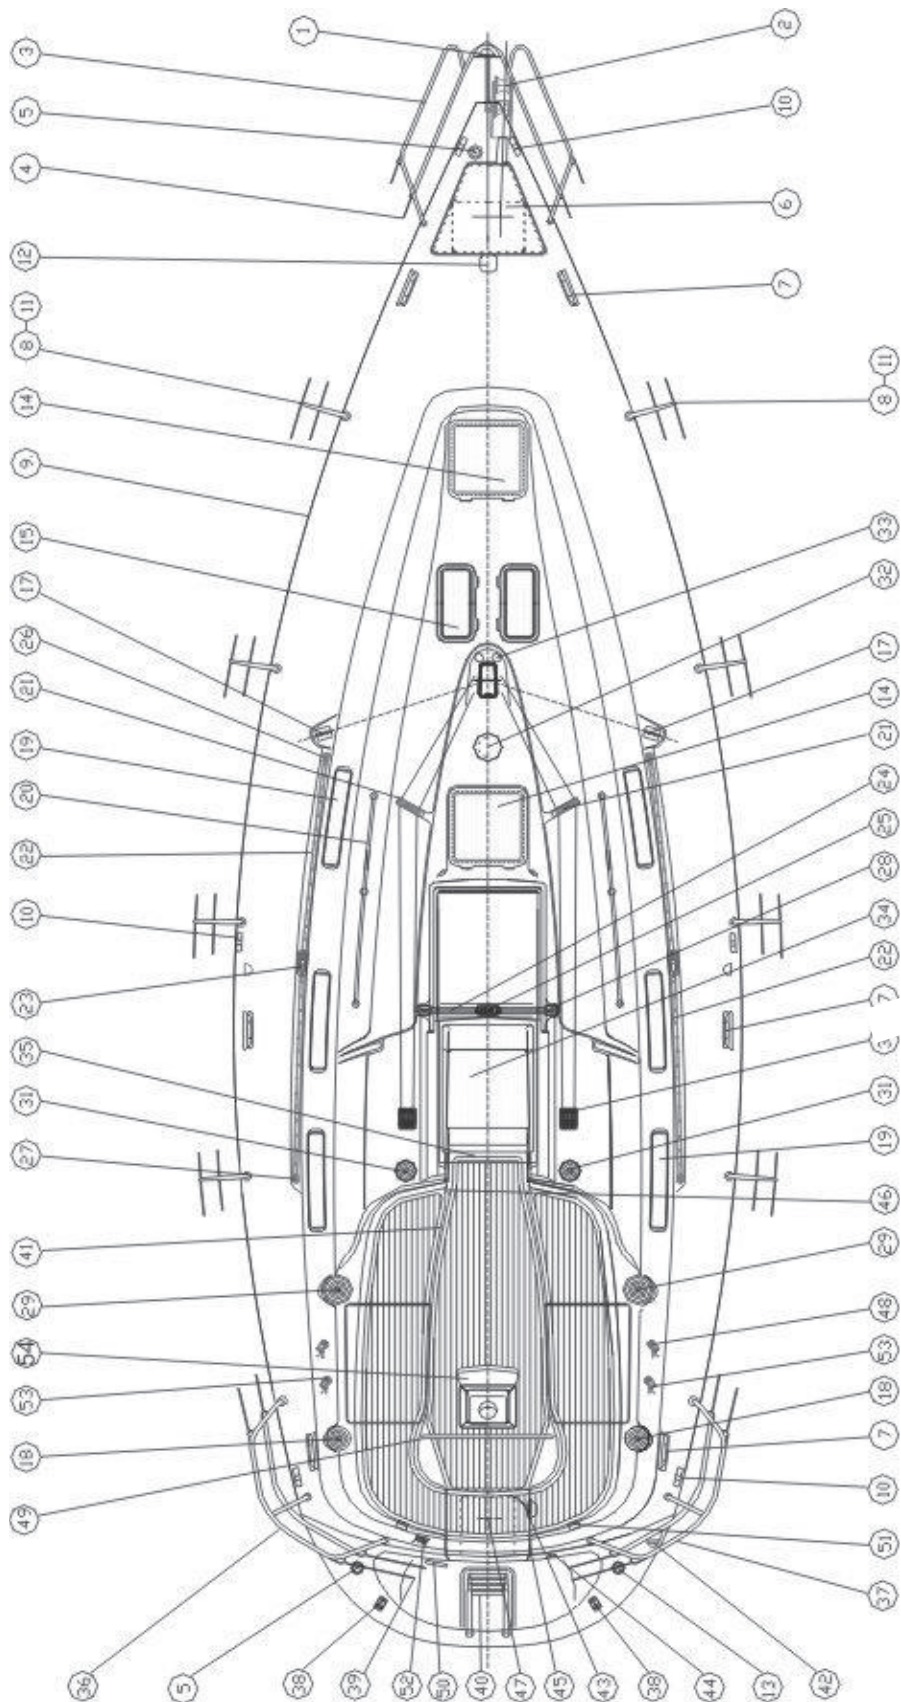

1	Bow navigation light	Zweifarbennleuchte
2	Bow fitting	Bugbeschlag
3	Bow pulpit	Bugkorb
4	Life lines	Relingsdurchzüge
5	Water inlet	Wasser Einfüllstutzen
6	Anchor chain bail	Ankerkasten
7	Mooring cleats	Belegklampe
8	Stanchion	Relingstütze
9	Toe rail	Fußreling
10	Fair lead	Leinendurchführung in Fußreling
11	Stanchion base	Relingfuß
12	Spin. boom vang padeve	Deckauge
13	Fuel inlet	Diesel Einfüllstutzen
14	Op. hatch	Vorschiffsluke
15	Op. hatch	Vorschiffsluke
16	Forward lowers chainplate	Vorstagpütting
17	Main shrouds + aft kiwars cgk	Wantenpütting
18	Spinnaker winch	SpinnakerWinde
19	Opening portlight	Decksfenster
20	Grabrails	Handreling
21	Deck organizer	Umlenklöcke
22	Genoa track	Genuaschiene
23	genoa track car	Genuaschlitten
24	Mainsheet track	Grossschotschlitten
25	Mainsheet track car	Grossschotschiene
26	Front endstop (g. track)	Schienenendstück
27	Aft endstop (g. track)	Schienenendstück mit Umlenklöcken
28	Endstops mainsheet track	Schienenendkappe
29	Winch	Genuawinde
30	Stopper	Stopper
31	Winch	Fallwinde
32	Ventilator	Deckslüfter
33	Through deck cable fitting	Kabeldurchführung
34	Sliding hatch	Schiebeluke
35	Washboard	Steckschott
36	Aft port pushpit	Heckkorb links
37	Aft starboard p.	Heckkorb rechts
38	Backstay chainplate	Achterstagpütting
39	Aft pushpit life line	Heckkorbsicherung mit Pelikanhaken
40	Swim ladder	Badeleiter
41	Cockpit portlight	Cockpitfenster
42	Stern light	Heckleuchte
43	Hand operator bilge pump	Handlenzpumpenhebel
44	Shore pick up 220 V (110 V)	Landanschluss 220 V (110 V)
45	Engine ventilation inlet	Belüftungsroste für Motorraum
47	Tiller	Pinne
48	Cheek block-port/starbord	Liegender Block Back/Steuerbordseite
49	Steering wheel	Steuerrad
50	Shower	Cockpitdusche
51	Tank venting	Tankentlüftung
52	Camcleat	Schotklemme
53	Footblock with lockoff	Liegender Block mit Stopper
54	Steuersäule mit Motorinstrumententafel	Steering Pedestal with Engine Panel

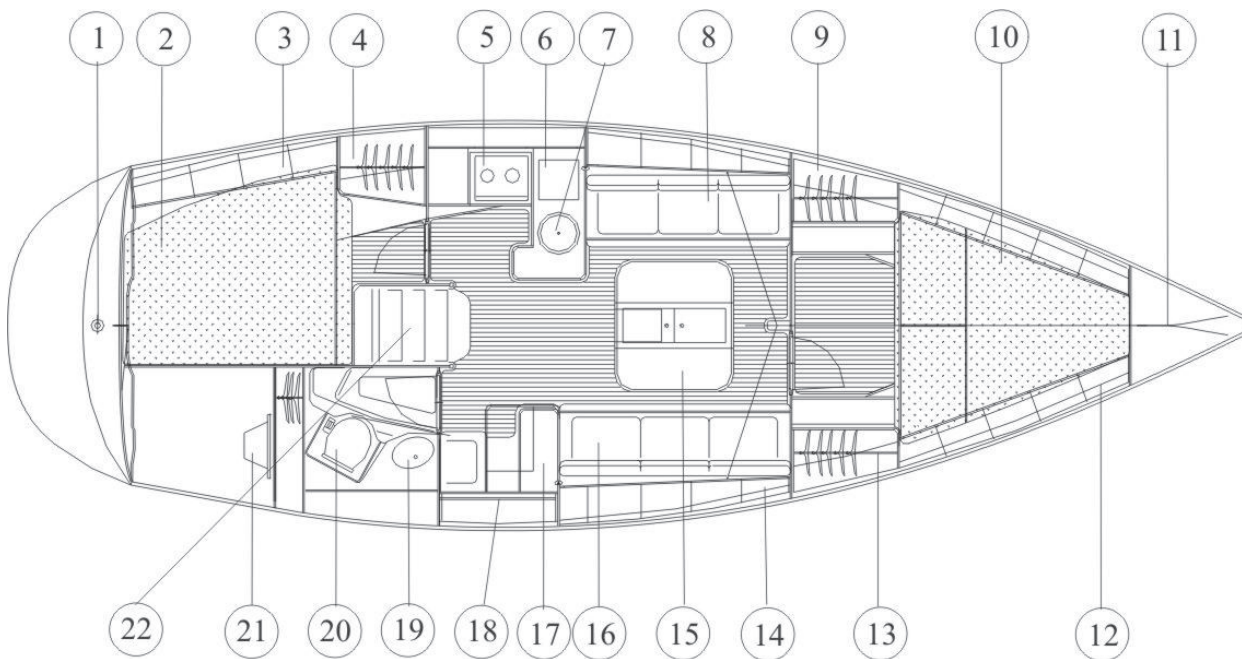1.2.3. Accommodation plan (2 cabin version)

1	Steering gear	Rudernanlage
2	Double berth	Doppelkoje
3	Shelf	Fach
4	Hanging locker	Kleiderschrank
5	Gas cooker with oven	Gasbackofen
6	Cooling box	Kühlbox
7	Sink	Spüle
8	Seating	Sitzgruppe
9	Hanging locker	Kleiderschrank
10	Double berth	Doppelkoje
11	Anchor locker	Ankerkasten
12	Shelf	Fach
13	Hanging locker	Kleiderschrank
14	Shelf	Fach
15	Saloon table	Salontisch
16	Seating	Sitzgruppe
17	Chart table	Kartentisch
18	Electrical switch panel	Elektrische Schalttafel
19	Shower	Dusche
20	WC	WC
21	Locker seat	Backskiste
22	Companion way / engine compartment	Niedergang / Motorraum

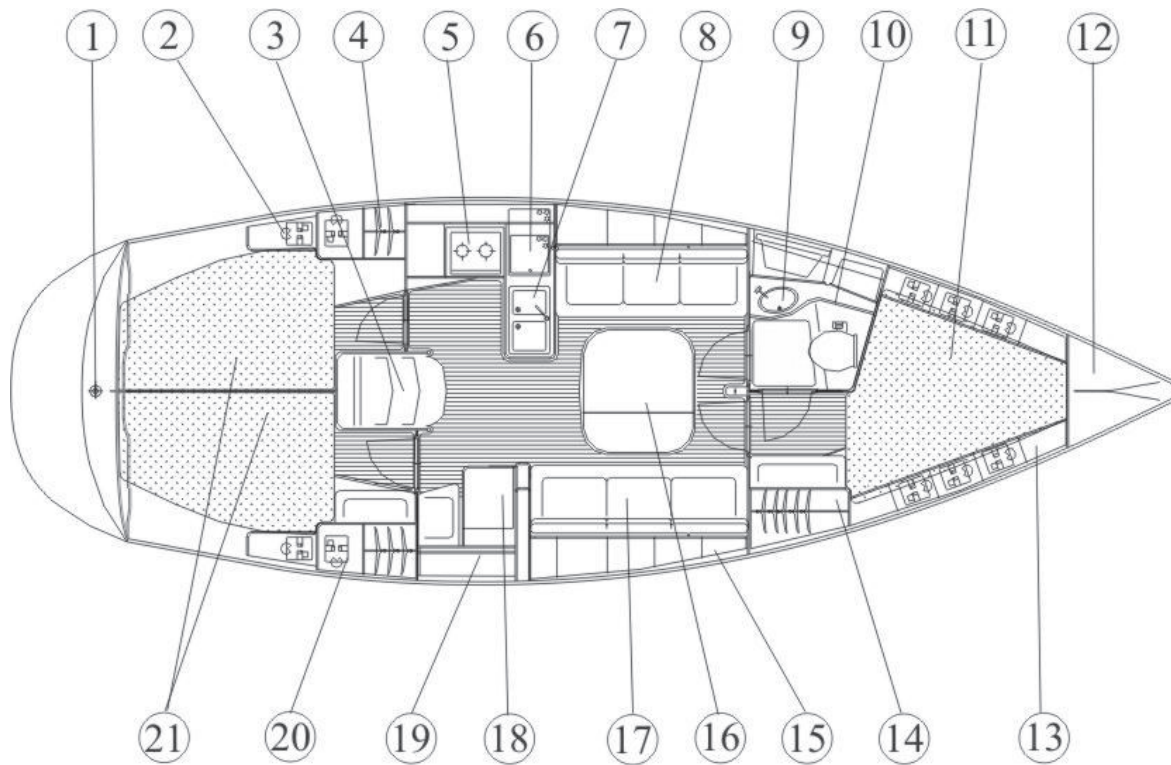1.2.3. Accommodation plan (3 cabin version)

1	Steering gear	Rudernanlage
2	Shelf	Bord
3	Companion way/Engine compartment	Niedergang/Motorraum
4	Hanging locker	Kleiderschrank
5	Gas cooker with oven	Gasbackofen
6	Cooling box	Kühlbox
7	Sink	Spüle
8	Seating	Sitzgruppe
9	Head	WC
10	Shower	Dusche
11	Double bed	Doppelbett
12	Anchor locker	Ankerkasten
13	Shelf	Bord
14	Hanging locker	Kleiderschrank
15	Shelf	Bord
16	Saloon table	Salontisch
17	Seating	Sitzgruppe
18	Chart table	Kartentisch
19	Electrical switch panel	Elektrische Schalttafel
20	Hanging locker	Kleiderschrank
21	Double berth	Doppelbett

1.3 Drive systems

1.3.1 Sails

The SY Bavaria 36 is equipped with the following standard and optional sails:

Main Sail – Standard	ca. 31.00 m ²
Main sail in mast furling gear	ca. 27.00 m ²
Furling genoa	ca. 36.00 m ²
Furling jib	ca. 26.00 m ²
Storm jib	ca. 6.50 m ²
Drifter	ca. 56.00 m ²
Spinnaker	ca. 91.00 m ²

1.3.2 Rigging

Mast

- LM- Profile, without taper; – 18 deg. double spreaders , angular; - 2 halyards, topping- and boom lifts,
- tipping line and fittings.

Boom

- LM-Profile; - clew outhaul; - 2 reefing lines; - eye for mainsheet; - eye for tipping line.

Standing rigging (made of 1x19–lace, material 4401), consisting of:

forestay with excessive footage (headsail reef system)			1x
intermediate shroud	2x	backstaytackle	1x
lower shroud	2x	permanent backstay with bridle	1x
upper shroud	2x	permanent backstay tackle	1x

Running Rigging

Inside the mast:

- | | |
|-------------------------------|--------------------------------|
| - Main halyard | Option: |
| - Genoa halyard | - Spinnaker halyard (attached) |
| - Boom lift | - Spinnaker uphaul |
| - 3 additional weighing lines | - Spinnaker downhaul |

Inside the boom: 2 reef lacings (battened sail); 1 foot jig

Complementing we refer onto the enclosed trim instructions of the manufacturer.



Caution

before of every sail: Test strings, cordage, lanyards and split pins. Safeguard the split pins through adhesive tape or bending. Transpose deformed or damaged bolts.

1.3.3 Motorising, engine room, gear, propeller


This yacht is equipped with a inboard diesel engine with a sail-drive gear and a fixed propeller (Option folded propeller).

The engine room is separated from living quarters by plywood-bulkheads covered with sound-insulating material. An access is possible through:

- a shutter below the companion way,
- detachable bulkhead in the aftcabin beside the engine room

Cooling-water supply to the engine is realised via the saildrive-gear.

Engine plant

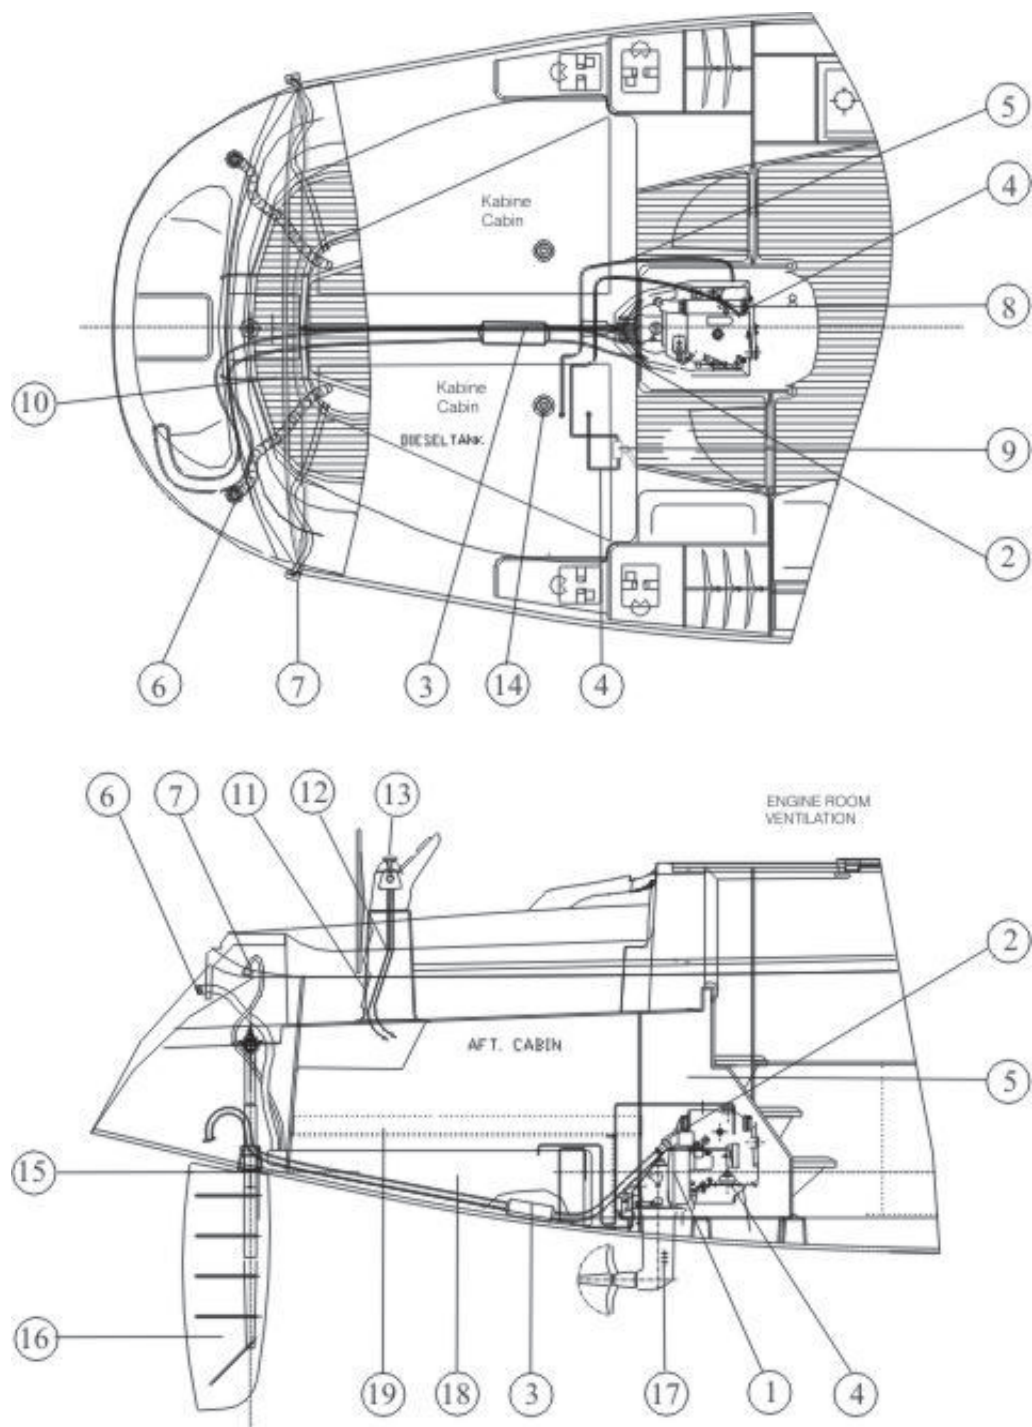

1	Motor Volvo	Motor Volvo
2	Engine exhaust system	Motorabgassystem
3	Exhaust waterlock	Abgaswassersammler
4	Engine fuel intake	Kraftstoffeinfüllstutzen
5	Feed back fuel	Kraftstoffrückführleitung
6	Fuel tank filling hose	Kraftstoffeinfüllschlauch
7	Fuel tank ventilator	Tankentlüftung
8	Fuel filter	Kraftstofffilter
9	Fuel cock	Kraftstoffabsperrhahn
10	Ventilation Grille	Belüftungsroste
11	Engine panel	Motorinstrumententafel
12	Engine control cables	Motorfernbedienungskabel
14	Fuel gauge	Kraftstofftankfüllanzeige
15	CWL	CWL
16	Rudder	Ruder
17	Engine water cooling	Maschinenkühlwasser
18	Fuel tank	Treibstofftank
19	Berth	Kojenauflage

2. Installations and circuits

2.1 Tanks and piping - water


2.1.1 Fresh water, drinking water –cold

The yacht has two water tanks with a capacity of altogether abt 300 l. Fresh water is supplied via a water inlet (with a blue cover) at the transom, port side and on the forecastle near the chain locker. You can take water from the tank over a hose connection leading to the pressure water-pump.

This pump, realising the complete cold water circulation, is fitted in the head. An interruption of the operation of the pressure pump is done by cutting off all ducts. All pipes/hoses should be checked for leaks if the pump continuous working though all ducts were cut off properly.


The pump is protected by a filter which should be regularly checked and cleaned if necessary.

Components: (2 cabin version)

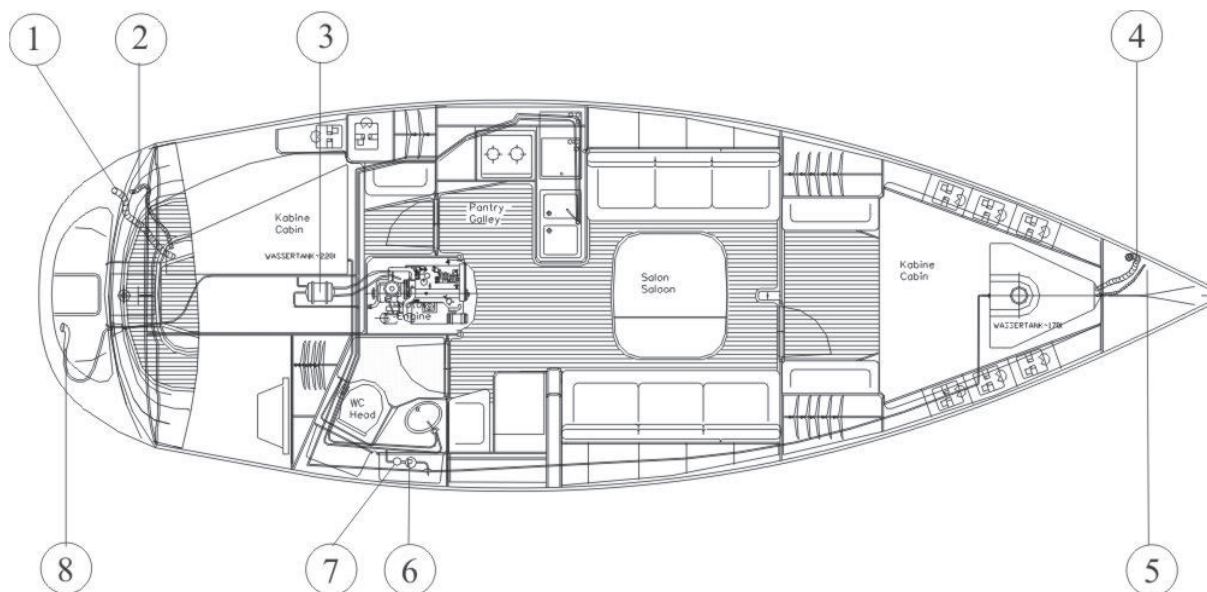

1	Einfüllstutzen	Deck plate inlet
2	Tankentlüftung	Tank venting
3	Boiler	Water heater
4	Einfüllstutzen	Deck plate (inlet)
5	Tankentlüftung	Tank venting
6	Frischwasserpumpe	Fresh water pump
7	Druckgefäß und Druckschalter	Accumulator tank + pressure switch
8	Cockpitdusche	Shower

Components: (3 cabin version)

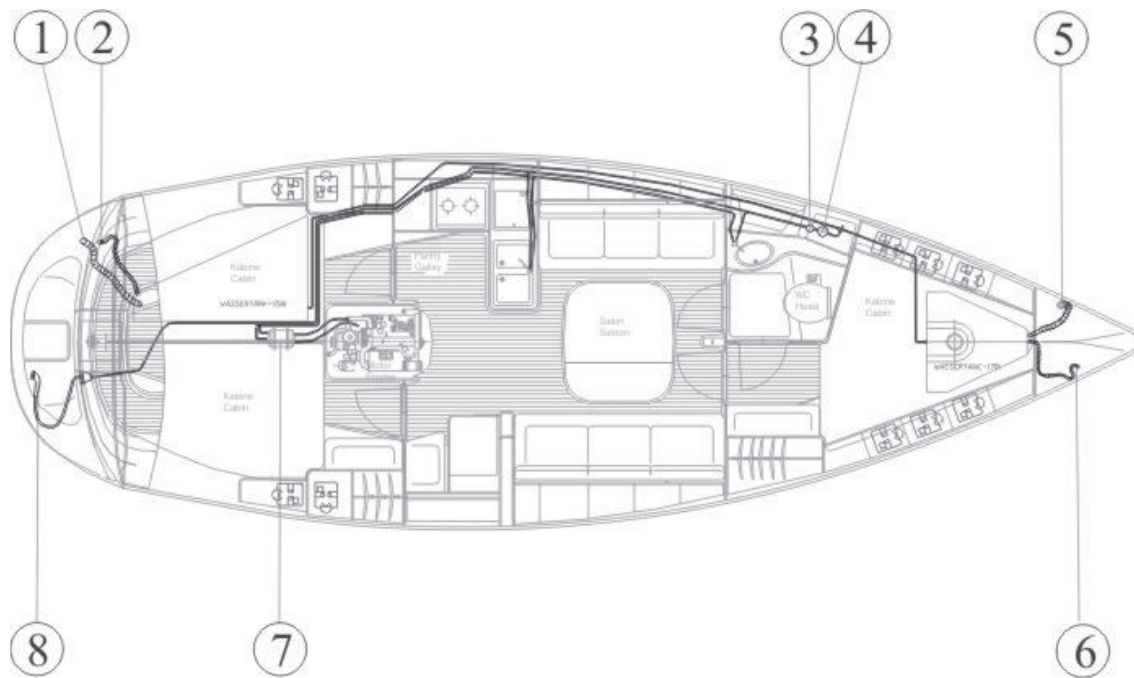

1	Einfüllstutzen	Deck plate inlet
2	Tankentlüftung	Tank venting
3	Druckgefäß und Druckschalter	Accumulator tank + pressure switch
4	Einfüllstutzen	Deck plate (inlet)
5	Tankentlüftung	Tank venting
6	Frischwasserpumpe	Fresh water pump
7	Boiler	Water heater
8	Cockpitdusche	Shower



Note

Exchange the water in tank from time to time. Additionally you should use common purifiers.

2.1.2 Sea-water circulation

Sea-water is necessary for both WC flushing and engine cooling (see: 2.9).


2.1.3 WC –installation: see enclosed directions for use




Attention

If you are not aboard for a longer time you should close all sea-valves.

Components: WC-flushing (2 cabin version)

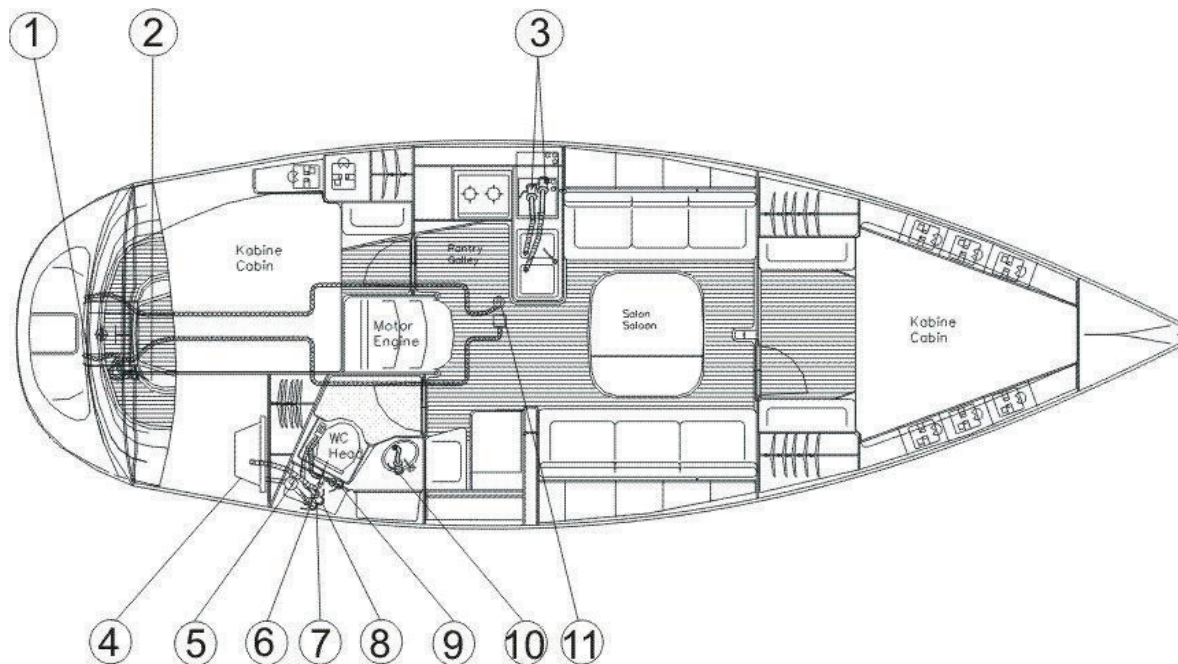

1	Borddurchlass	Outlet
2	Handlenzpumpe	Hand op. bilge pump
3	Kugelhahn Ausgang Spüle	Sink drain valve
4	Fäkalientank	Waste water tank
5	Fäkalienpumpe	Waste water drain pump
6	Zweiwegeventil	„Y“ waste valve
7	Kugelhahn Ausgang Fäkalientank	Waste water drain valve
8	Kugelhahn Ausgang WC	Toilet drain valve
9	Kugelhahn Eingang WC	Toilet water inlet valve
10	Kugelhahn Ausgang Dusche	Shower drain valve
11	Elektrische Lenzpumpe	Electrical bilge pump

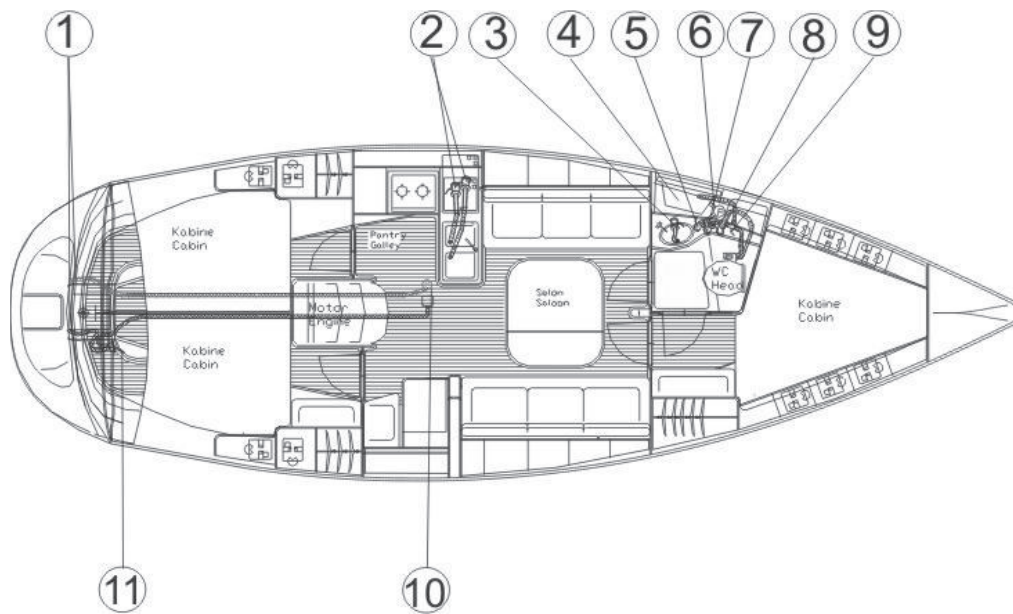(3 cabin version)

1	Borddurchlässe	Outlets
2	Kugelhahn Ausgang Spüle	Sink drain valve
3	Kugelhahn Ausgang Dusche	Shower drain valve
4	Fäkalientank	Waste-water tank
5	Kugelhahn Ausgang Fäkalientank	Waste-water drain valve
6	Fäkalienpumpe	Waste-water drain pump
7	Kugelhahn Ausgang WC	Toilet drain valve
8	Kugelhahn Eingang WC	Toilet water inlet valve
9	Zweiwegeventil	“Y” waste valve
10	Elektrische Lenzpumpe	Electrical bilge pump
11	Handlenzpumpe	Hand operated bilge pump

2.2 Tanks and piping - fuel**Storage tank**

There is a 150 l plastic diesel tank with an inspection opening on starboard-side below the aft berths. It is filled via a fuel inlet with a chrome cover (marked with DIESEL) at the transom of the yacht. The tank pickup is situated on the tank. The supply is made of a fire-proof fuel hose according to ISO 7840. The vent line is led to above deck.

Supply of the engine

The engine is supplied via a suction pipe from the upper edge of the tank. Due to the short distance a fire proof fuel pipe is used throughout. This is led via a wide-meshed filter/ water separator, fuel pump and fine filter to the engine and then back to the tank.

**Attention**

A trouble free operation of the engine and heating is only possible, if the fuel is clean. That's why a regular inspection and cleaning of filter/water separator is unavoidable. The fuel tank should be completely emptied and cleaned once a year.

**Warning**

When refilling the tank:

- Switch off the engine, heating and stove !
- Do not smoke or use open lights !

2.3 Steering gear


2.3.1 Description of the system

The rudder is a suspended, balanced hydrofoil midship rudder. It is operated by hand from the steering wheel at the steering post in the cockpit. Transmission of power is realised by means of bowden control to the rudder quadrant. With the autopilot (option) there is a electric motor installed.

2.3.2 Rudder blade and rudder bearings

The rudder blade is a profiled one. It consists of a FRP-body. The rudder post with a diameter of 60mm is made of a sea-water resistant aluminium alloy and is laminated into the blade. The post runs in two easy-going and special rudder bearings. The rudder is fixed by a mounting clip at the upper end of the post that also serves for the keeping of the rudder tiller.

The mounting clip is additionally secured with a straight stud bolt on the rudder post.

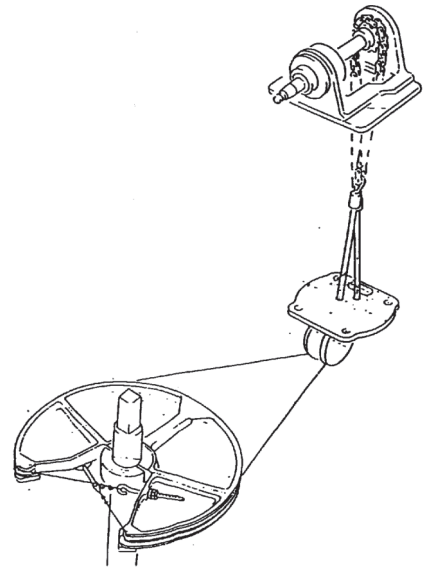

Attention

Check regularly and repair if necessary tight hold of the mounting clip on the rudder post.

The rudder bearings used by **BAVARIA YACHTBAU** are self-setting bearings. Since rudder bearings are subject to wear and tear they should be inspected and maintained regularly.

Emergency tiller

The emergency tiller is stored in the starboard locker seat.

In case of emergency remove the steering wheel, the rudder quadrant for rope pulls and the quadrant for the auto pilot (option).

Moreover the rudder head-cover has to be removed and the emergency tiller to be mounted and secured.



Attention

Please ensure a suitable bearing lubrication of the necessary parts of the rudder installation with water-proof lubricants (or Teflon). Bearing clearance has to be avoided and can be adjusted at the top bearing. The post must have no clearance but should not need heavy movements.

You can brake or even fix the steering wheel by turning a screw home. Make always sure that this brake is not drawn especially when sailing with the auto pilot. This would mean an overload for the electric motor.

The socket of the steering gear is integrated into the deck's form. On the socket there is the casing of the wheel hub. A chain is laid over a tooth-wheel of the hub.

2.4. Bilge pumps, bilge pipes

The chain locker is made watertight against the yacht. It is self-bailing through two holes in the skin.

All **BAVARIA** yachts have got a self-bailing cockpit, too. Water in the cockpit runs by the abaft trim to the back through the aperture.

2.4.1 Description of the pumping arrangement

The yacht is equipped with both a manual pump and an electric bilge pump. The main line bilge suction has a capacity of 75 l/min.

**A draw bucket is an ideal means for bailing out water .
It should always be ready in a cockpit seat locker.**

**Attention**

Close all sea valves if you leave your yacht for a longer period. Valves being not clearly visible, like e.g. in the toilet room, should only be opened before use and closed short after.

**Warning**

In a serious situation, e.g. in case of a heavy inrush of water as a consequence of a collision, the pumping capacity might not be sufficient. Take measures for damage control with collision mats or other suitable means.

**Note**

In case of spherical valves a transverse lever-direction indicates: CLOSED and a longitudinal ones means : OPEN

**Maintenance note**

The tightness of ducts should be inspected regularly.

Retighten all hose clips and the stuffing boxes of valves

Components of the bilge pumping installation

see point 2.1.3

2.5 The electric installation

2.5.1 The AC-installation

The yacht has got a shore connection (option) by which it can be supplied with electric power from ashore when being berthed in a port. The plug box (meeting the CEE-norm) is installed at the transom of the yacht. The power is supplied into a shore connection unit, placed under the chart table.

The plug box is operational as soon as the shore supply cable has been plugged in. It only serves the operation of electric machines

2.5.2 The DC-board net

All electric devices aboard are supplied with the 12 V DC. A main-switch is installed in the electric panel at the chart table. Power distribution is effected by a switchboard above the chart table. The lettering next to each switch refers to the corresponding consumer.

You can find all the switches for the 12 V consumers at the switchboard. By this you can operate different consumer-groups ,being marked with logos or lettering, separately. Some of the switches are designed for an installation of additional electric devices. There are only automatic fuses used. So you only have to press them in case of a breakdown. If a fuse blows repeatedly you should spot the cause or consult a specialist (electrician).

2.5.3 Operating the installation and specific features

The combination of an AC- with a DC installation offers a clearly higher comfort but requires some special knowledge.

Charging the batteries

All batteries are maintenance-poor and drain-protected. They are charged via a buffer diode by the motor-generator. Charging the starter battery always takes priority to ensure a safe start of the engine.

AC-consumers

The only fixed link is the one to the battery charger. The safety contact plug-box at the electric panel is designed for electric tools to be used for small repair work.

DC-consumers

The essential consumers are:

- | | |
|-----------------------------|---------------------|
| - navigation lights | -bilge pumps |
| - engine displays | -tank display |
| - VHF-radio wiring (option) | -electronic devices |
| - devices for comfort | |

Navigation lights have absolute priority. In case of a lack of capacity all other consumers have to be switched off first. By a stand-by operation of the engine, even when under sail, the batteries can be brought up rather quickly. After a while you can switch on the other consumers again.

2.5.4 Important warnings on the DC-installation

**Attention**

You should never

- work at the electric installation if it is in operation,
- alter fuses or overload switches,
- change the electric wiring and/or wiring plans; this has to be done by specialists only,
- install electric devices or add parts that exceed the allowed load limit,
- leave the yacht unattended with the electric installation in operation. This does not go for automatic bilge pumps, fire protection and alarm devices.
- As long as the diesel engine is in operation, you must not disconnect the 12 V charging circuit.

Before starting a voyage you should always check

- the battery voltage,
 - the correct function of navigation lights .
- Have spare lamps for all navigation lights aboard.

2.5.5 Important warnings on the AC-installation

**Attention**

The electric wiring of the yacht and/or corresponding wiring plans must not be changed!

Service and maintenance must be carried out by a qualified specialist.

Warning


To avoid the danger of a rush of current or fire :

- The shore connection cable must never hang into water.
- Plug the shore connection cable first aboard and then ashore.
- Do not alter plugs of shore connection cables


Disconnecting the shore connection cable:

First disconnect the shore connection cable ashore and then aboard.

2.5.6 Distribution of electric devices: (2 cabin version)

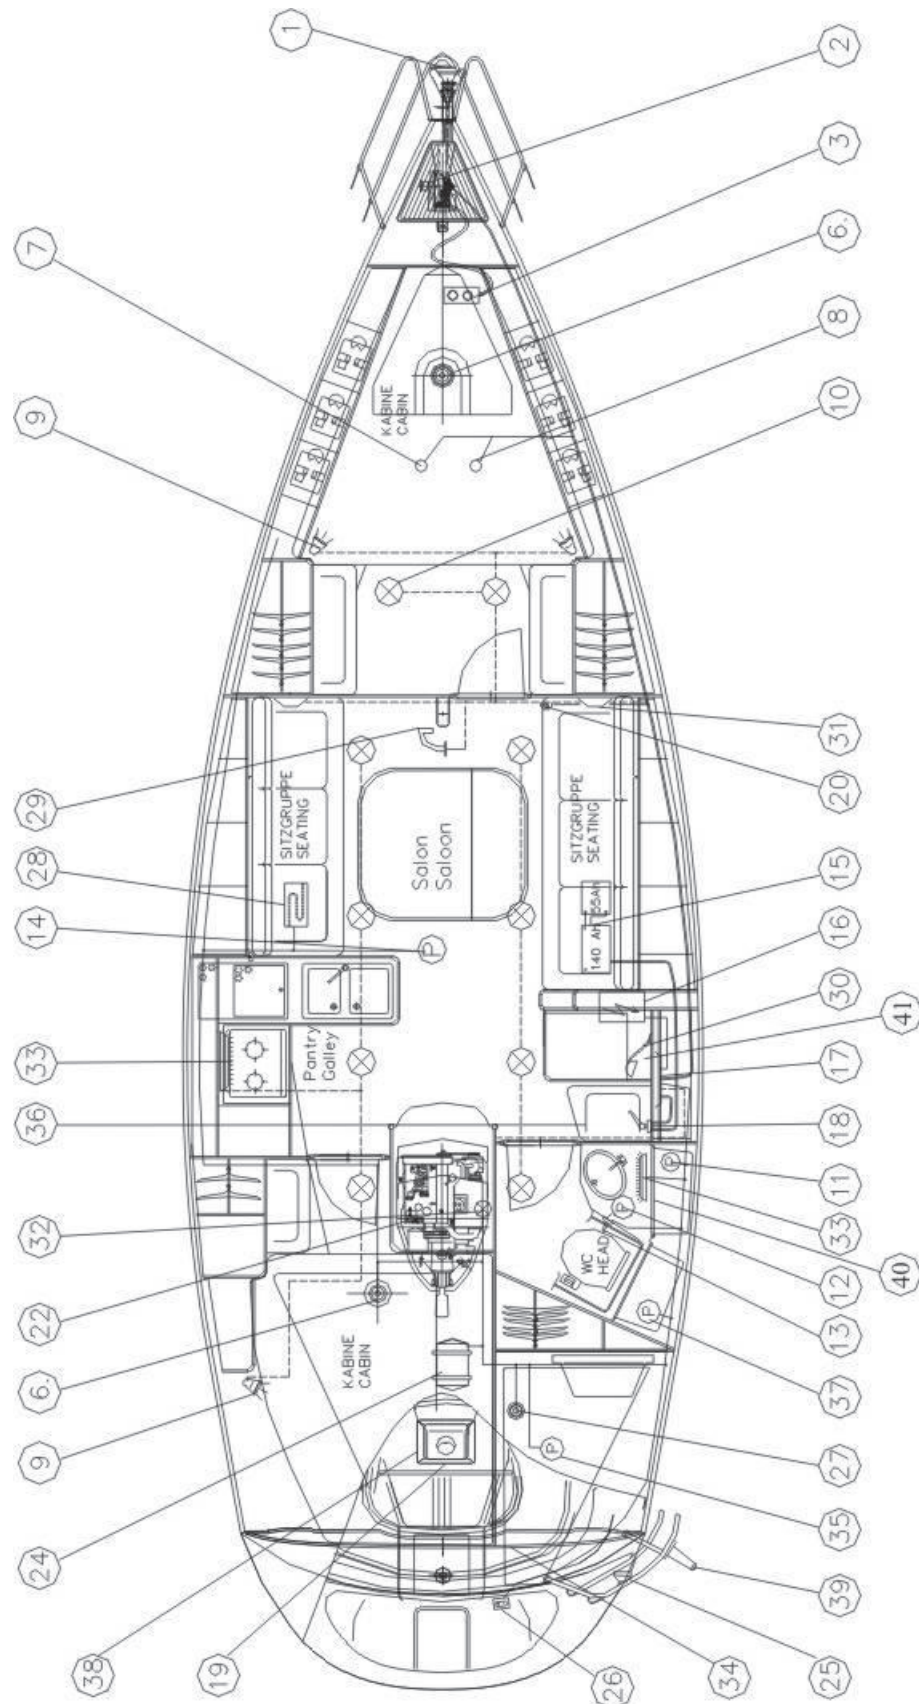


(3 cabin version)

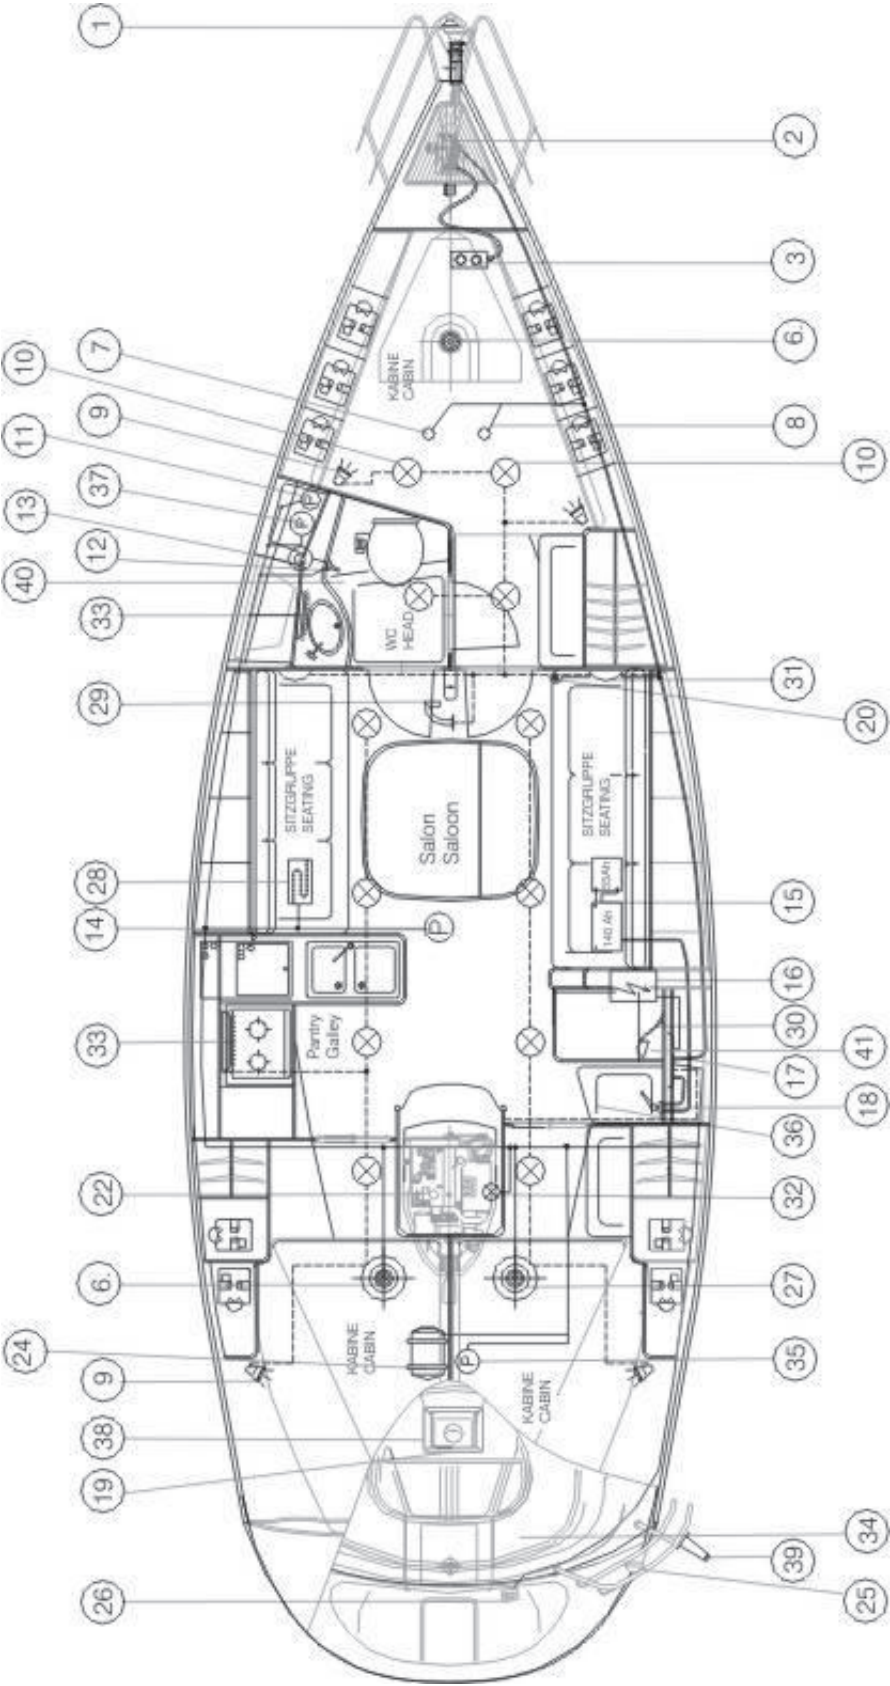

1	Motoring light	Zweifarbennleuchte
2	A windlass	Elekt. Ankerwinde
3	Windlass foot switch	Ankerwinde - Bedienteil
4	Windlass foot switch	Ankerwinde - Bedienteil
6	Fresh water gauge	Vorratgeber für Frischwassertank
7	Through - hull depth sounder (Optional)	Echolot - Geber (Option)
8	Through - hull speedometer (Optional)	Sumlog - Geber (Option)
9	Reading light	Leselampe
10	Ceiling light	Deckenleuchte
11	Fresh water pump	Druckwasserpumpe
12	Shower drain pump (Optional)	Duschpumpe (Option)
13	Shower pump switch (Optional)	Duschpumpenschalter (Option)
14	Bilge pump	Elektrische Lentzpumpe
15	Batteries group	Batterie
	Engine battery 55 A	Motorstromkreis-Batterie 55 A
	Bord battery 88 A	Bordstromkreis-Batterie 88 A
16	Battery charger (Optional)	Batterieladegerät (Optional)
	Electric panel with. ¾ full indication for	Elektro Panel mit ¾ Vollanzeige
17	waste water tank	Fäkalientank
18	Main switch	Batterie-Hauptschalter
19	Auto pilot (Optional)	Autopilot (Optional)
20	Electronic Compass (Optional)	Elektronischer Kompass (Option)
21	Instrument repeater (Optional)	Instrumenten Wiederholer (Option)
22	Engine start	Anlasser
24	Water heater (Optional)	Boiler (Option)
25	Stern Light	Heckleuchte
26	Shore pickup 220 V (110 V)	Landanschluss 220 V (110 V)
27	Fuel gauge	Vorratgeber für Kraftstofftank
28	El. refrigeration	El. Kühlschrank
29	Mast lights (navigation light)	Kabeldurchführung
30	Reading light	Kartentischlampe
31	Speaker (Option)	Lautsprecher (Option)
32	Engine room light	Motorraumlampe
33	Neon lamp	Neonlampe
34	Air heater (Optional)	Heizungsfühler (Option)
35	Air heater - pump diesel (Optional)	Heizung Pumpe Diesel (Option)
36	Air heater - thermostat (Optional)	Heizung Thermostat (Option)
37	Waste water pump (Optional)	Fäkalien Pumpe (Option)
38	Engine instrument panel	Motorinstrumententafel
39	Radio antenna	Antennenkabel
40	Head with integrated shower	WC mit integrierter Duschkabine
41	Chart Table	Kartentisch


2.5.7 Wiring plans

PN	Bezeichnung
12	Toplicht
9	Dampferlicht
6	Beleuchtung Bug
3	Beleuchtung Heck
1	Salingleuchte
5	Innenbeleuchtung
2	Innenbeleuchtung
10	Innenbeleuchtung
7	Innenbeleuchtung
4	Innenbeleuchtung
12	Instrumentenbel.
0,25	H1 Blatt 2
9	Navigationsinstr.
6	Funk
3	Ankerwinde
VL	Bilgenpumpe
11	FW-Pumpe
VL	Duschabsaugpumpe
VL	Fäkalienpumpe
8	Heizung
VL	Kühlschrank
17	12V-Steck Dose
10	12V-Steck Dose
5	Reserve
18	Reserve
19	Reserve
20	Reserve

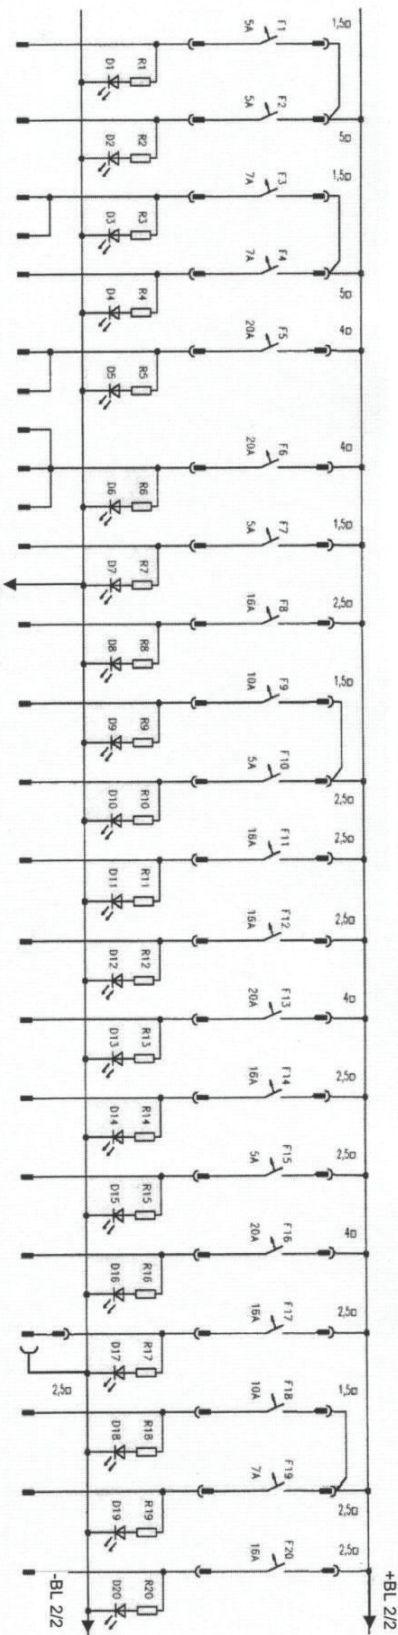



Plug	Stecker
Fuse	Sicherung
Designation	Bezeichnung
Masthead light	Toplicht
Steaming light	Dampferlicht
Bow light	Beleuchtung Bug
Stern light	Beleuchtung Heck
Crosstrees light	Salingleuchte
Interior lighting	Innenbeleuchtung
Instrument lights	Instrumentenbel.
Navigation instruments	Navigationsinstr.
Radio	Funk
Anchor windlass	Ankerwinde
Bilge pump	Bilgenpumpe
Fresh water pump	FW-Pumpe
Self priming shower pump	Duschabsaugpumpe
Waste water pump	Fäkalienpumpe
Calorifier	Heizung
Refrigerator	Kühlschrank
Plug socket 12V	12V-Steckdose

2.5.8 Distribution plans

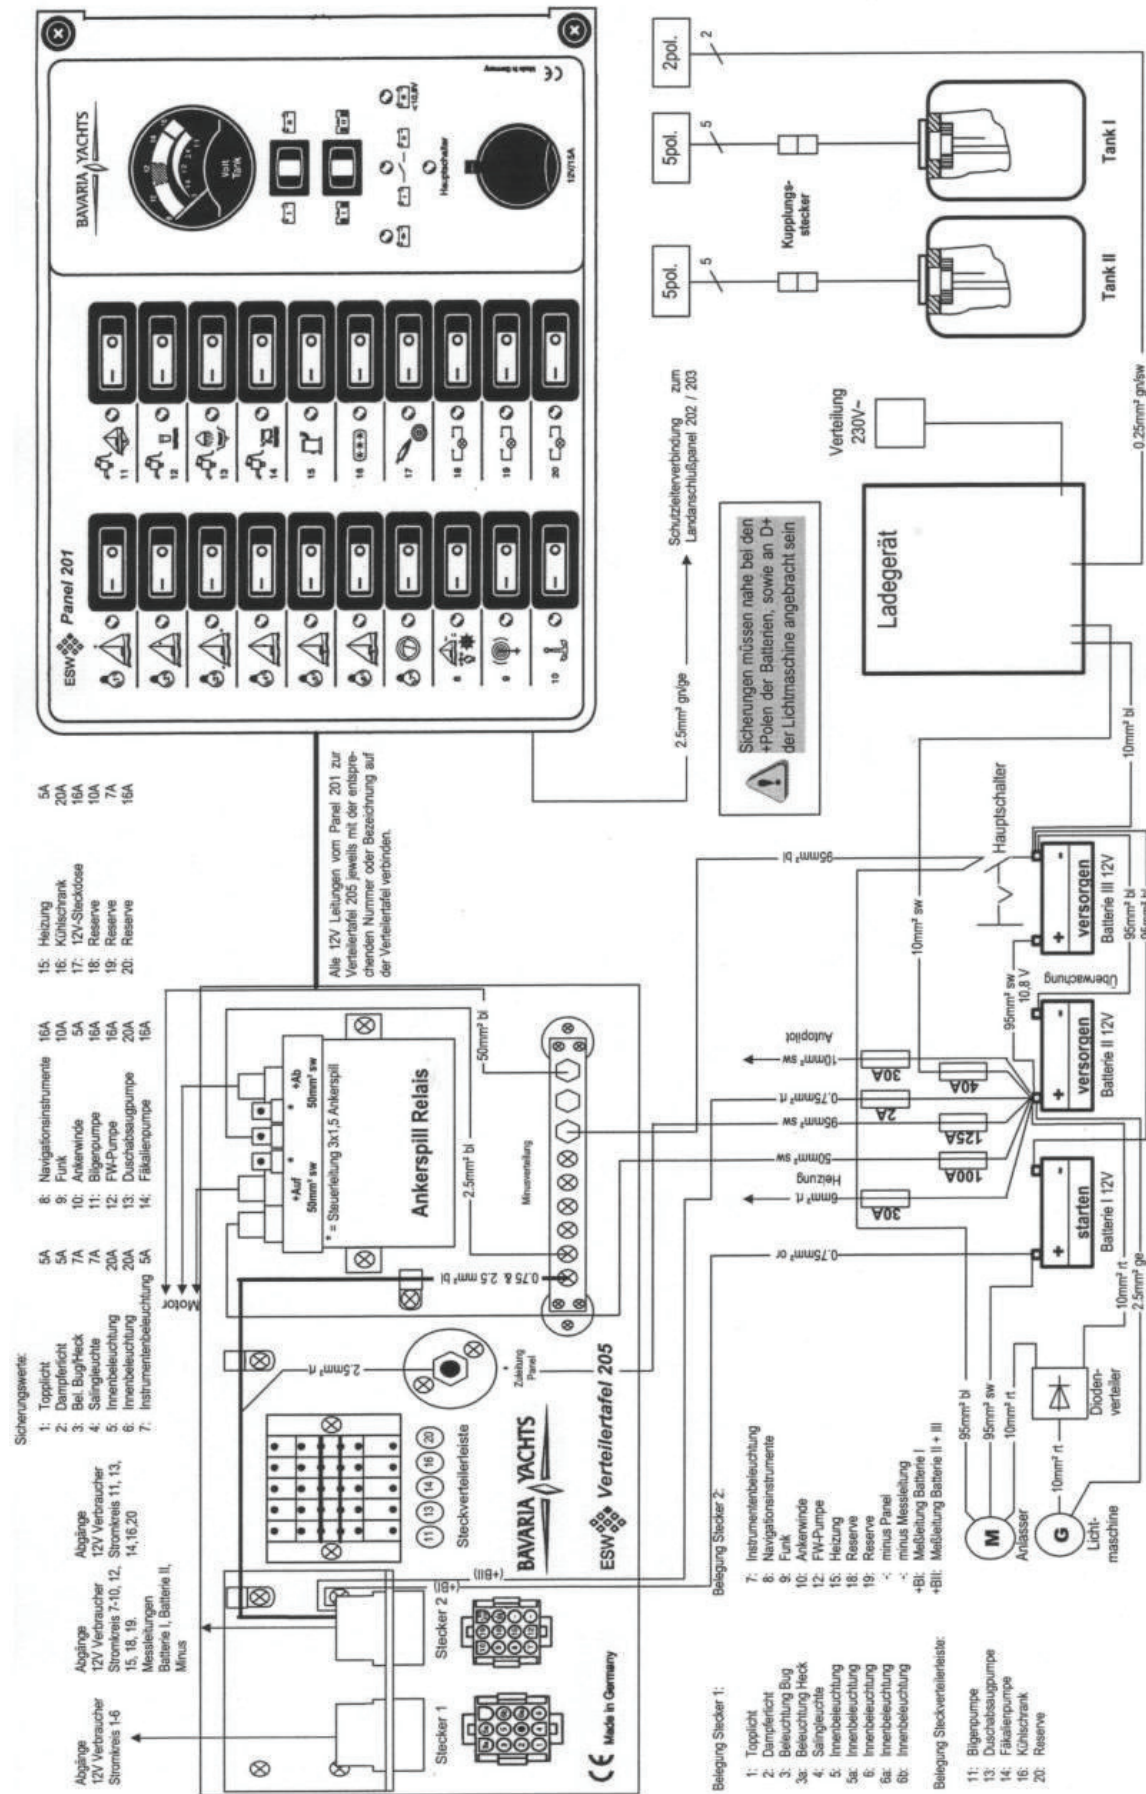

2.5.9 AC-distribution

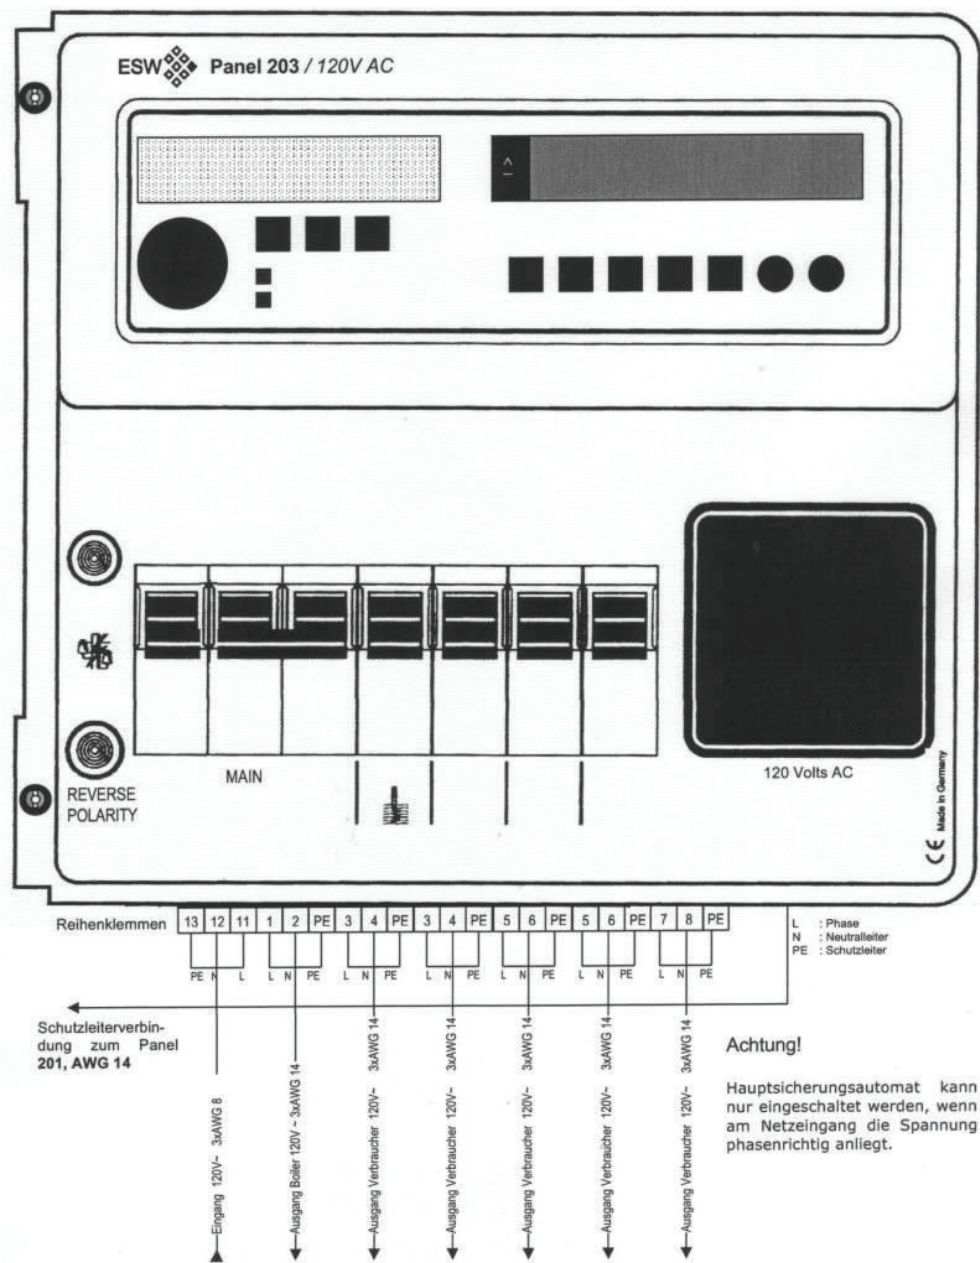


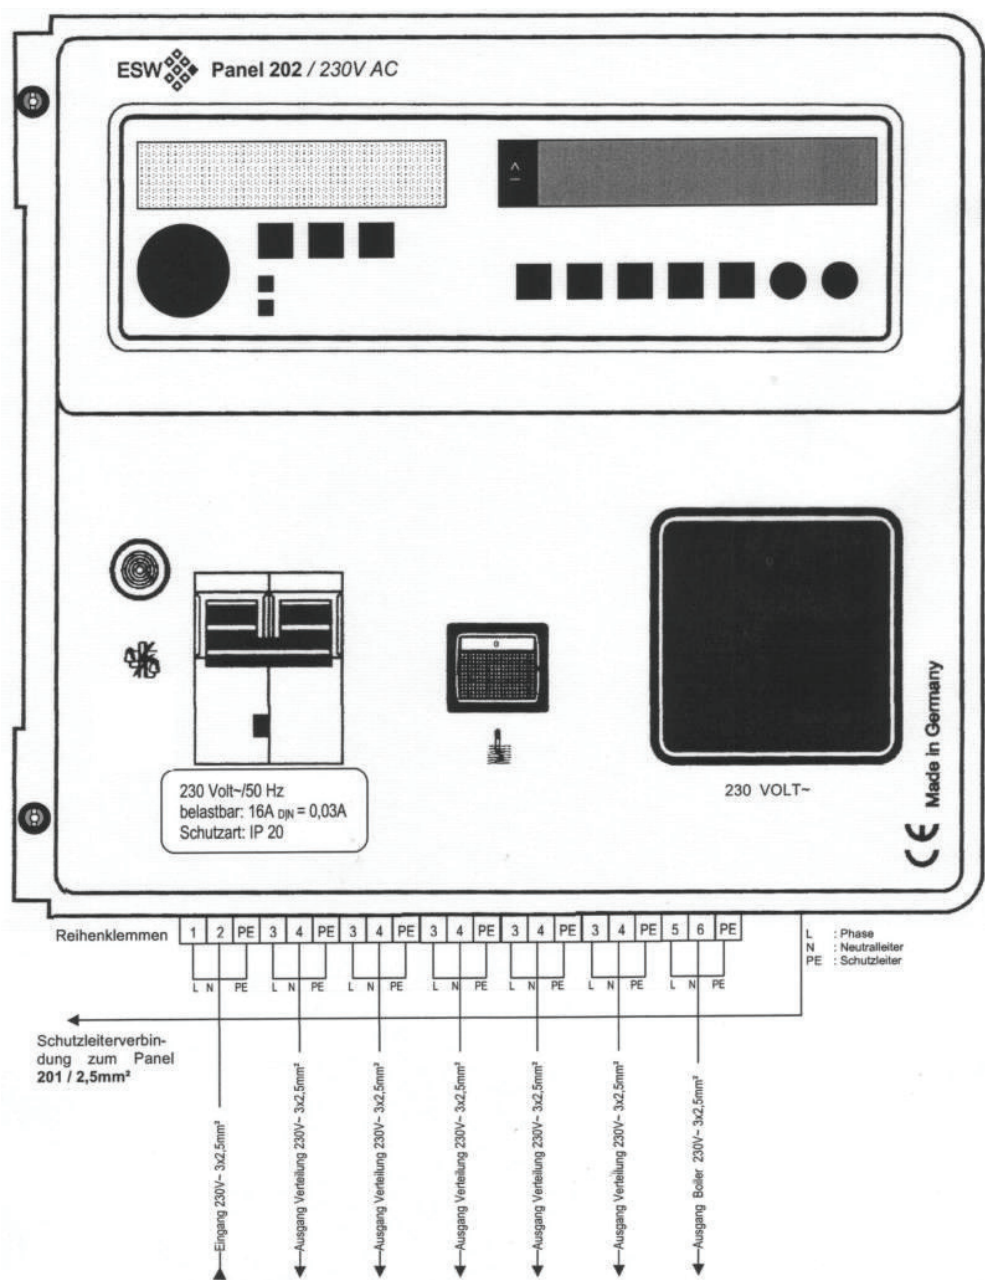


2.6 L.P.G. installation

The gas installation for the stove meets the European norm EN 10239. The test-certificate is attached. The gas pipe leading to the stove from the standard 3 kg-gas cylinder is an 8 mm copper pipe. It is placed into a self-bailing casing moulded into the deck in the rear cockpit area. All gas pipes have been installed according to the German safety regulations. The best-by date for the soft connection hoses between the gas cylinder and the copper pipe and between copper pipe and stove is printed onto the hoses. They have to be replaced after the expiry date. The reducing valve in the gas cylinder casing has a service pressure of 30 mbar. The flow rate is 1 kg/h.

2.6.1 The components (2 cabin version)

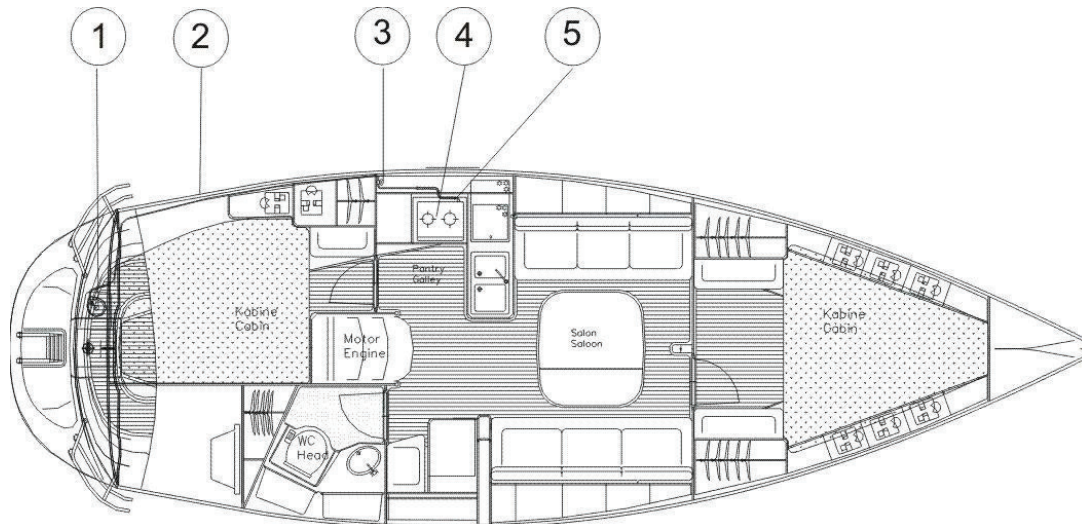

(3 cabin version)

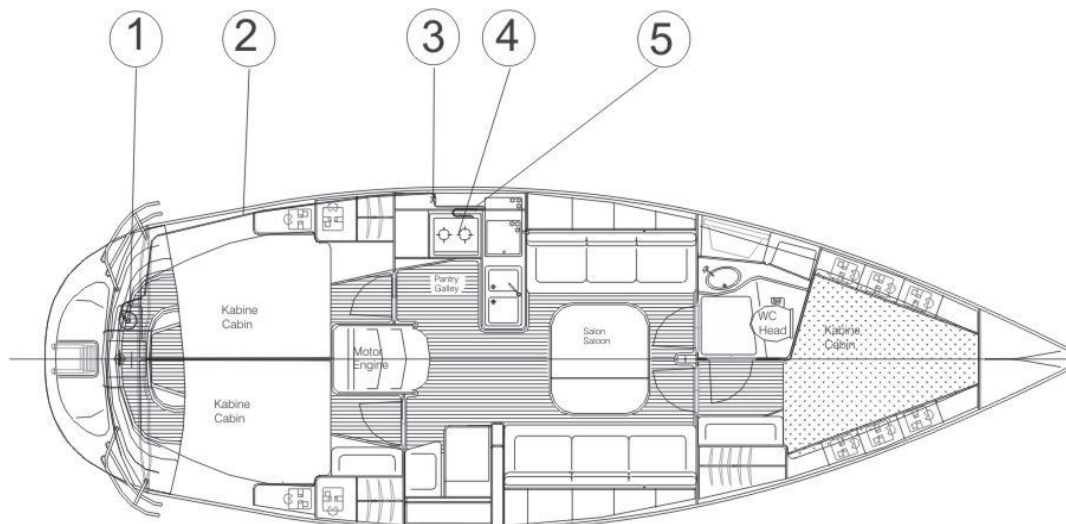

1	Gas tank with valve	Gasflasche mit Reduzierventil
2	Copper tube 6/8	Kupferrohr 6/8
3	Gas stopp cock	Gaskugelhahn
4	Gas stove with oven	Kocher mit Backofen
5	Rubber hose	Gummischlauch

2.6.2 Operation

Gas installations require care. That's why you should follow this sequence:



Attention

- Open the stop valve in the gas cylinder casing
- Open the valve before the stove
- Open a stove valve and lighten the gas
- Keep the valve open until the glow timer allows further burning.



Attention

For finishing follow the same (above mentioned) sequence from the valve in the gas cylinder casing to the stove valve to allow all gas in the piping to escape and burn.



Attention:

- Do not use liquids containing ammonia for checking the pipe.
- Never handle with open light and do not smoke if you look for leakage or if you connect a new gas cylinder.

And here is some more advice on how to prevent difficulties with the gas installation:

- Close all gas valves if the stove is not in use. In a case of emergency you should close the valves immediately.
- The stove valves have to be closed before the gas cylinder valve is opened.
- Check the L.P.G. installation for possible leakages regularly. Check all connections with soap suds or the like (for doing so the stove valves have to be closed – all other valves of the installation have to be open).
- If you find any leakages close all valves and have the installation repaired by a specialist before further use.
- Since the flames consume oxygen a proper airing and deaeration is necessary. Do not use the stove for heating the cabin.
- Valves of empty gas cylinders have to be closed and disconnected from the installation. Have the covers ready.
- Do not use the gas cylinder casing for storing other equipment.
- Never leave your yacht unattended if the stove is in use.
- Check the hose pipes at least once a year. Have them replaced if necessary.
- If you install a new stove make sure that it has got the same working pressure.
- Check the exhaust gas pipes at least once a year. Replace them if they are defective.

2.7 Fire protection

When building the yacht special attention was paid to avoid the risks of fire. This includes the choice of materials, the distance of stove flames to the surrounding built-in furniture and an island position of the engine. The engine room has got a lining with fire resistant insulating material.

As the owner of the yacht you should keep this state and pay attention to the following advice:



Attention:

Keep the bilge clean and check regularly if there is a smell of fuels or gas.

Do not have any freely suspended curtains above or close to the stove or other devices with open fire.

Inflammable material must not be stored in the engine room. If you store non-inflammable materials in the engine room make sure that they are protected against falling into the engine installation or are in the way.

Furthermore you and your crew can support fire protection if you follow the following advice:



Never

- obstruct any exits or hatches.
- alter safety installations like fuel- and gas valves and electric switches and the like.
- leave the yacht unattended if the stove or the heating is in use.

Never

- use gas lights in the yacht.
- fuel the tank or replace gas cylinders if the engine is running or if the stove or heating is used.
- smoke or use open lights while handling with fuel or gas.

The well-known sources of danger on board are

- the stove in the pantry and
- the engine room.

If, despite all precautionary measures, a fire should break out aboard, there are three fire extinguishers on board which are fixed at the following places:

Nr. 1 and 2 : **Powder extinguisher** at the starboard locker seat, at least fire grade 10A/68B

Nr. 3 : **Powder extinguisher** in the navigational seat, at least fire grade 10A/68B

Additionally you should place in the pantry a light **fire retarding cloth**, which is made of glass cloth and is very useful in the case of fire caused by overheat fat.

It is the yacht owner's duty

- to have all fire extinguishers regularly checked and maintained ;
- to have fire extinguishers replaced after the expiry date. The same goes if the extinguishers should have been used. The new extinguishers should at least have the same capacity as the discussed ones.

It is the yacht owner's or skipper's duty

to make sure that

- all extinguishers are freely accessible
- to inform all persons on board about:
 - the position and use of all fire extinguishers and the fire retarding cloth,
 - the position and function of the opening for the extinguisher's nozzle in the engine room bulkhead,
 - the exit through the escape hatch above the fore-berths.

**Caution**

Test the fire extinguishers regularly!
 Train yourself as regards fire fighting.
 Always consider seaman's duty.

2.8 Anchor (option)

The bower anchor (plough anchor), abt. 17 kg, hot-galvanised, is known for its high holding power. It lays ready-to-fall in an anchor stowage device and is secured with a bolt. The chain has a length of 50 m and a nominal thickness of 8 mm. It is run out by an electric anchor windlass operated with a remote control. The remote control is placed in the chain locker before use and its function is activated at the switch board.

Furthermore it is recommendable to have a stern anchor as well as sufficient mooring- and towing lines with the necessary strength on board.

E.g.: 1 stern folding anchor (4-fluke grapnel anchor), 12 kg, hot-galvanised, fixed at the aft guard-rail. 6m chain forerunner, thickness 8 mm, 34 m polyamide anchor rope, 18 mm, 3-strand hawser laid. It is stored in the port transom seat.

The rope is cleated aft.

2.9 Engine cooling system**Engine cooling**

The engine has got a two-circuit cooling system. Water enters through the saildrive, is led to the heat exchanger and then injected into the exhaust gas pipe. Together with the exhaust gas the cooling sea water is exhausted via the silencer and the exhaust pipe at the stern. This guarantees a trouble-free engine operation. Moreover the engine noise is reduced.

All hose connections of the system are secured with double stainless steel clips.

**Attention**

- Check and clean the sea water filter in regular intervals, depending on the water quality.
- Before starting the engine make sure that the cooling water inlet is open.
- Have a short look into the engine room for possible leakage.
- When the engine is running it is highly recommendable to check regularly if cooling water is escaping with the exhaust gas.

2.10 Exhaust gas system

The yacht is fitted with a “wet” exhaust gas system, i.e. cooling sea water is injected into the exhaust gas elbow causing a cooling of exhaust gases. This mixture is led down into a silencer/water lock, runs through a pipe in the locker seat on the starboard side of the aft cabin, is led upwards at the stern and escapes to the side above the water-line.

The exhaust gas hose consists of a synthetic rubber material with an integrated steel spiral.

The hose is heat-resistant (for some time) and should be checked and replaced if necessary.

A constant flow of sea water has to be guaranteed. The hose is secured at its joints with two clips.

If there is an interruption of the sea water flow, the temperature sensor in the exhaust gas hose will release an visual and acoustic warning. In this event you should stop and switch off the engine immediately until the problem has been settled (see manual of the engine manufacturer).



Attention

If saltwater leaks from the exhaust, a regular inspection is urgently advisable.

2.11 Ventilation/Airing

We have taken the following measures for a proper ventilation of all rooms:

Chain locker

A certain ventilation is achieved through the hawser port in the cover of the chain locker and through its bilge holes.

Living cabins/ Salon and forward quarter

One ventilator

Aftcabin

1 side light /bull's eye showing to the cockpit

Components:

1 deck ventilator, 8 side lights, 8 folding hatches

2.12 Board ducts, sea water valves

Openings below the water line are possible weak spots. That is why we pay special attention to them.

All board ducts in the underwater part, with the exception of the duct for the transmitter of the echo sounder, consist of brass-made screwed joints with spherical sea valves and hose nipples.

All hose connections are secured with two clips each.

For the cockpit drain special plastic joints are used.



Attention

Close all sea valves if you leave the yacht for a longer time. Valves being not clearly visible, like e.g. in the toilet room, should only be opened for use.




Maintenance note

The tightness of board ducts should be inspected regularly.
Check and retighten all hose clips and stuffing boxes of valves if necessary.




Note

In case of spherical valves a transverse lever-direction indicates : CLOSED
And a longitudinal direction means : OPEN .

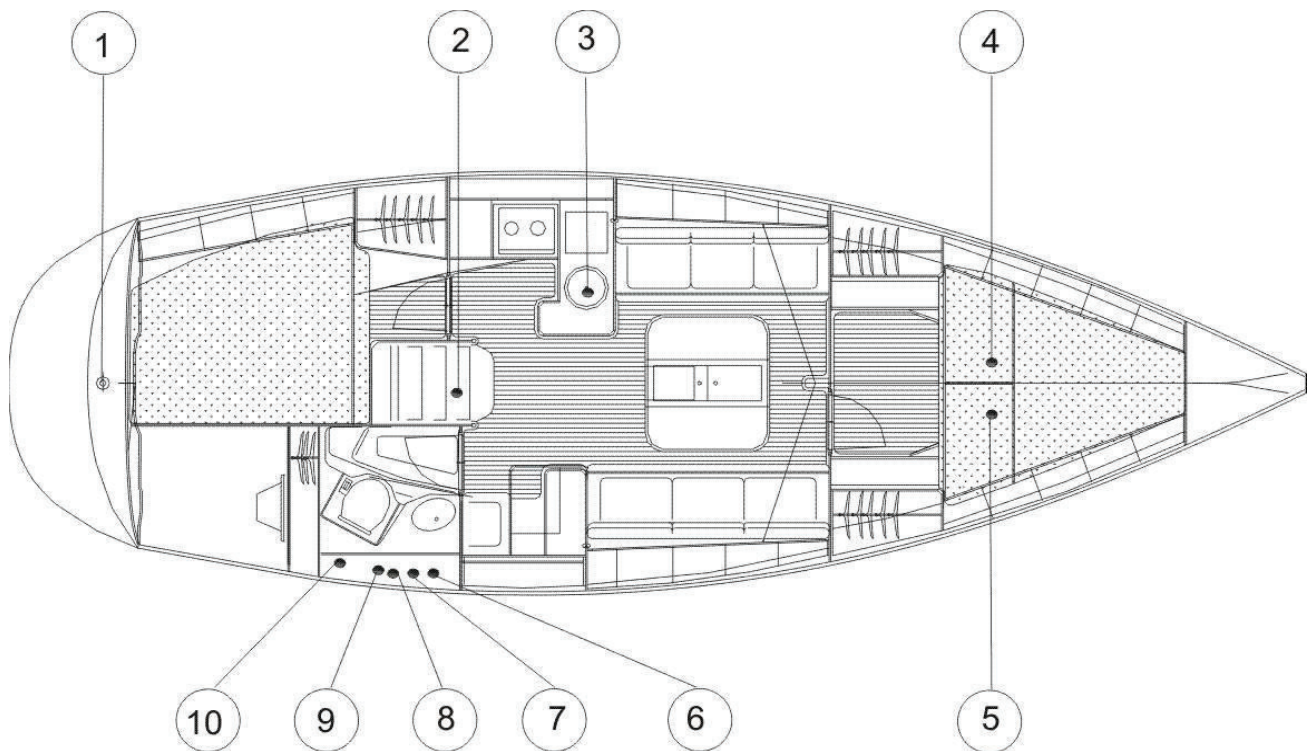Board ducts: (2 cabin version)

1	Exhaust drain	Ausgang Auspuff
2	Cooling water strainer	Kühlwasserfilter
3	Sink drain	Ausgang Spüle
4	Depth sounder	Echolot
5	Speedometer	Geschwindigkeitsmesser
6	Washbasin drain	Ausgang Waschbecken
7	Toilet drain	Ausgang WC
8	Shower drain pump	Ausgang Duschpumpe
9	Toilet inlet	Eingang WC
10	Waste water drain	Ausgang Fäkalientank

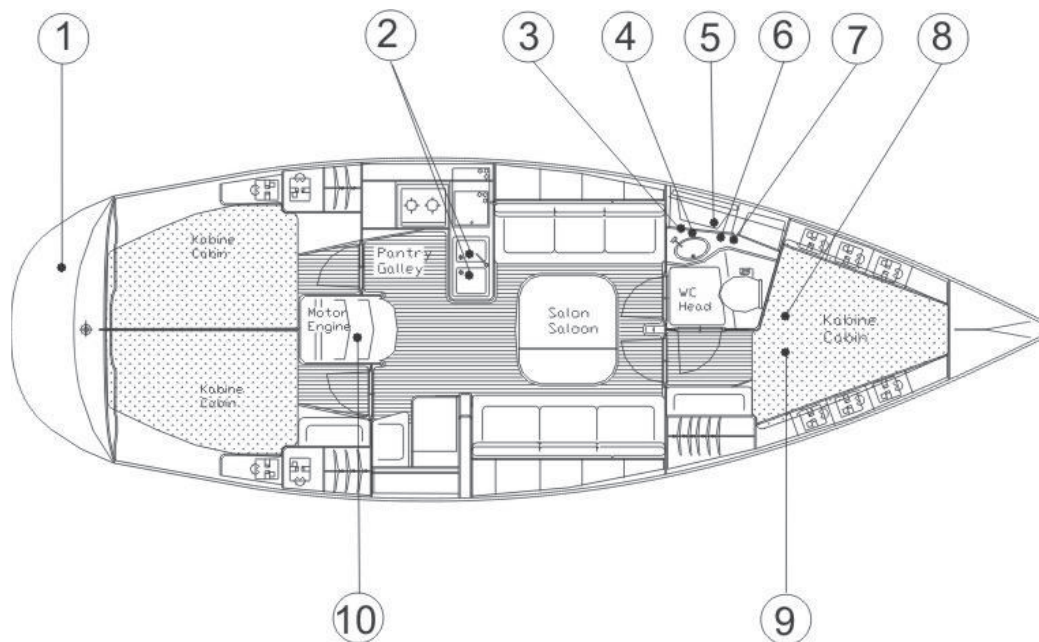(3 cabin version)

1	Exhaust drain	Ausgang Auspuff
2	Sink drain	Ausgang Spüle
3	Toilet water inlet	Eingang WC
4	Toilet drain	Ausgang WC
5	Waste-water drain	Ausgang Fäkalientank
6	Shower drain	Ausgang Dusche
7	Electrical shower drain pump	Ausgang Duschpumpe
8	Depth sounder	Echolot
9	Speedometer	Geschwindigkeitsmesser
10	Cooling water strainer	Kühlwasserfilter

3. Environmental protection

BAVARIA YACHTBAU has already met the legal requirements referring to exhaust gas regulations with its choice for the inboard diesel installed. An exhaust gas type-examination certificate can be handed in or sent on later.

3.1 Fuel and oil

You should be especially careful when filling the tank. A (wet) cloth around the fuel inlet can prevent fuel from dripping into water. In your engine manual you can also find a diagram with a curve about the specific fuel consumption thus offering you some good hint on the most favourable engine speed.

For a necessary exchange of oil you should use a suction pump, because you cannot drain it off like a car. The oil has to be exchanged at least once a year, even in case of a little operation time of the engine. A well-maintained engine should never leak. But in order to prevent even smallest amounts of oil being discharged overboard with the pumped out bilge water, the engine bed has been designed in form of a closed oil sump. All water from this sump, being possibly mixed with oil, has to be pumped into a separate canister and has to be deposited ashore.

In any case there should be oil-binders aboard.

3.2 Waste

For all water sportsmen it goes without saying: waste is not thrown overboard. This is also true for biodegradable waste. There should be a regular waste bag or –bin in a locker seat.

3.3 Sound

The wet exhaust pipe of the diesel engine reduces the engine sound considerably. Additionally rubber bearings, elastic couplings and the engine room insulation minimise sound emissions. Nevertheless you should not turn up the engine too quickly and, please, reduce the engine speed in waters with dense traffic.

3.4 Swell

Natural bank areas are sensitive against swell. Please keep sufficient berth. Formation of waves, caused by your yacht, is an indicator of where and when you should reduce your speed to avoid unnecessary swell. Pay attention to relevant signs.

3.5 Exhaust gas

Check the escaping exhaust gas regularly. The exhaust gas should show neither black smoke nor blue clouds. In such a case you should either clean the air filter or have a repair shop readjusted the engine.

3.6 Antifouling coatings

The underwater part of the hull of each yacht has to be protected with an antifouling coating because marine growth means more energy for propulsion. Today there is a wide range of protective paint with various effects for different bodies of water. Trust the recommendations of specialists for your decision. Coatings that are effective for years without any grinding in between are especially recommendable. But if the coating has to be sanded to some extend you should arrange these activities with the port officials. Generally the ground under the yacht has to be covered with some plastic cloth to collect the rubbed down dust and dispose it .

3.7 Varnish removers

Most varnish removers contain aggressive substances and should not be used or as little as possible. A mechanical removal of paint is the much better way.

4. Maintenance

4.1 Maintenance, cleaning

1. Mast and rigging

See: Notes of the manufacturer

2. Sails

The sails are made of Dacron. This material is very robust and resistant. Thus the sails keep their form for a very long time.

Inspect all your running and standing rigging carefully for sharp edges, splints, protruding ends of wire and the like because laminated cloth is especially sensitive against touching them. Those parts of the cloth that can chafe at spreaders or shrouds should be protected on both sides by sticking self-adhesive cloth to them. The same goes for the foot of the sail if there is the possibility of chafing at the rails.



Note:

- Please remember: Damage to the cloth is mainly caused if it is incorrectly treated or handled. Especially if you let it shake, expose it to UV rays constantly or store it improperly.
- If there are any questions on the cloths do not hesitate to contact the manufacturer or your sailmaker.
- Never remove track cars with ball bearings from the tracks carelessly. Always use sheet tracks with endstops.

Cleaning

Please clean your yacht immediately after you have taken it out of the water. High pressure cleaning devices will remove any growth. This is followed by an upkeeping of the surface of the yacht. All paint manufacturers provide detailed instructions for their coating systems.

For ships sailing in salt waters: remains of salt absorb water and can cause a faster corrosion. Where- and whenever it is possible you should rinse the yacht and parts of it with fresh water.

Care and maintenance of teak decks

Untreated teak weathers to a natural silver-grey color, with no detriment to the timber's strength or other mechanical/physical properties. Because of teak's inherent durability and weather-resistant properties, the use of protective paints or coatings is neither necessary nor advisable.

Practical tips on care and maintenance:

Protective woodcare oils – penetrate deep into the timber, and under the influence of heat and moisture can adversely affect the adhesion of the caulking material to the sides of the joint. As a result, the seal between the caulking material and the sides of the joint may break down, allowing water to enter.

Paints and lacquers are decorative coatings which, when applied to a teak deck, dry to form a continuous film over the caulking material as well. Some paints will not dry properly where they come into contact with the caulking material, leaving the surface tacky. In time most paints will flake away along the line of the joint. This spoils the appearance of the teak deck and causes cracks to open up along the joints.

Teak cleaners should be used only if they contain no other active ingredients apart from normal soap.

Additives such as phosphoric or oxalic acid, which are often incorporated as brighteners, are corrosive substances which attack both the caulking material and the timber, causing them to age rapidly.

We therefore recommend that teak decks be swabbed down with a mop and clean fresh water, to which a small quantity of normal soap may be added if desired. Heavy soiling may be removed by scrubbing with a hard sponge. The use of a power washer is not recommended. The *high-pressure water jet* will remove areas of sapwood and break the seal between the caulking material and the sides of the joint.

In extended periods of hot, dry weather teak decks should be watered at regular intervals to prevent the timber from drying out completely. Excessive loss of moisture will cause the timber to shrink, placing the joints under stress. Under unfavourable conditions this can lead to premature ageing or failure of the joint seal.

Stainless steel

The corrosion resistance of all fittings is based on their ability to constitute a thin skin together with the air oxidant, which makes a positive electrical potential. Specialists call it a cr-passive (cr is standing for chrome). But chrome is in the galvanic contact series negative and a bit less valuable than iron. If the thin protection skin is damaged the stainless cr will be active and less good than pure chrome. The corrosion can start.

Who is not disappointed about little brown spots on the fittings ? They are caused by flying rust or particles of iron, which are in the air and in all harbours placed near big towns. As soon as the flying rust settles onto the protective coat of the stainless steel, it destroys the cr-passivity very aggressive and fast.

Stainless steel only stays good looking for a long time, if there is taken good care of it.

Make it your habit to also clean the rail stanchions, pulpits and pushpit and all stainless steel fittings thoroughly too if you are washing your boat with clear water. Clear water will wash away the salt, rust and flying rust, the protective coat will be "ventilated" and its function is guaranteed again.

If you have already brown spots, you can use most of all available metal cleanings to take care of the stainless steel fittings or you take normal polish like you use it for the hull.

Of course – all the best care can not help, if in the first place the fittings are not made out of the right material or the stainless steel has not been treated correct. Before you will buy the fitting, ask e.g. if the fitting has been polished electrical.

4.2 Wearing- and spare parts

As an experienced skipper you will not have difficulties in getting original spare parts. If you need any help, please contact the yard.

If you need any spare parts but cannot get the original ones you have to pay attention to the stability values to keep the yacht at the high technical standard it used to have at the time of delivery.

4.3 Repair work

Repairs at the hull (polyester full laminate and polyester sandwich laminate) can be implemented by a reliable workshop considering the general rules for the processing of polyester resin. The interior construction was designed in such a way that a non-destructive elimination of defects can be realised. In regard to the technical equipment you may contact a reliable workshop or your dealer, too.

4.4 Winter storage

We have already given some well-directed advice on winter storage in different paragraphs of this manual. Generally speaking all firms offering winter storage should meet the latest technological standard as far as environmental conditions, storage blocks, fire protection and accessibility of your yacht is concerned. Moreover there should be fixed rules for work, done by the owner himself, to prevent any interference with other sportsmen.

If possible, the following objects should be taken from board and stored in a dry and frost-free place:

- Ship's papers and other relevant documents
- Charts, books and instruments
- Mattresses, upholstery, blankets and sleeping bags
- Sails and lines/ropes
- Foodstuffs
- Gas cylinders
- Safety equipment
- Life raft and rubber dinghy
- Batteries

Advice:

Before winter storage you should pay special attention to the following parts and protect them correspondingly:

- Rinse and clean the transmitters of the speedometer and echo sounder.
- Maintain the electrical systems and clean them with suitable materials.
- Water pipes can be successfully cleaned with soft acids, e.g. white vinegar.
- Water valves should be taken to pieces and greased.
- The toilet and corresponding pipes are cleaned with fresh water.
- The rudder should be fixed that no movements are possible (e.g. by fixing the tiller or wheel).

Engine:

- Fill the fuel tank completely
- Exchange the propeller's sacrificial anode (if necessary).
- Empty all cooling-water of the engine and follow the instructions of the manufacturer.
- Slacken all belts (lighting engine and other engine driven devices).

Winter storage

- Observe all notes in the engine manual.
- Store the fully charged batteries at a ventilated frost-free place.
- Grease the steering wire and –components
- Remove all water out of the ship and protect it against rainwater entering it.
- Replace all components which seem not to be reliable any longer.

Mast and rigging

It may not always be possible, but it is recommendable:

- Unship the mast,
- Refit all standing and running rigging,
- Inspect the cables and other wires,
- Inspect bolts, spanners and other tie points for possible fatigue of material or cracks,
- Rinse all aluminium parts with fresh water
- Rinse all lines/ropes with fresh water and store them in a dry place,
- Rinse and grease all guide rollers of the mast and the boom.

5. Final remarks and notes

This manual is in conformity with the directives of the harmonised European Norm EN 10240. Much of it might go without saying for you. Nevertheless we hope, that dealing with the different chapters of this manual will help you to understand the technical systems and the ideas behind them. As already mentioned in the introduction, the purpose of this manual is to contribute to an unspoilt use of the yacht.

Among the things that are not dealt with are e.g. the personal safety equipment. This solely belongs to the responsibilities of the skipper. It goes without saying that there have to be means of rescue for all persons on board. But this also includes the procurement and maintenance of a life raft, of signalling means, a first-aid- as well as a tool-kit.

Since the European Recreational Craft Directive pays special attention to fire protection it shall also be mentioned, that fire extinguishers have to be maintained in regular intervals and that it belongs to the duties of a skipper to introduce his crew into their operation.

Those being prepared for an emergency are normally never involved. But just in case: the yacht is properly equipped for those situations with suitable means.

We are constantly working on further developments of our sailing yachts. We hope you will understand that we have to reserve the right to carry out changes as far as form, equipment and technology is concerned. For these reasons you cannot lay claim to a complete correspondence of your yacht with the information, figures and descriptions in this manual.

If your yacht should be equipped with any details not being referred to in this manual or in the owner's file, your party to the contract will inform you about the correct operation and maintenance.

Since all yachts, manufactured by **BAVARIA Yachtbau GmbH**, are exclusively sold by official dealers there is no contractual relationship between the yard and the customer/owner.

Thus **BAVARIA Yachtbau GmbH** is not familiar with details of the contract between the dealer and the customer. That's why it is not urgently necessary that your party to the contract takes over the full extent of our warranty conditions.

So, if you have to make a claim it is unavoidable to contact your party to the contract.